



Digital Storage Oscilloscope

SEFRAM 5322DC, 5342DC, 5362DC, 5382DC

USER MANUAL



M53X2DC A 00

Table of Contents

SAFETY INSTRUCTION	7
Safety Symbols.....	7
Safety Guidelines.....	8
Power cord for the United Kingdom Erreur ! Signet non défini.	
GETTING STARTED	11
Main Features.....	11
Panel Overview	12
Front Panel.....	12
Rear Panel.....	15
Display	16
Setting up the Oscilloscope.....	18
QUICK REFERENCE	20
Menu Tree and Shortcuts	20
Acquire key.....	20
Autoset key.....	21
CH1/2 key	21
Cursor key 1/2	21
Cursor key 2/2	22
Display key	22
Hardcopy key	23
Help key	23
Horizontal menu key.....	23
Math key 1/2	24
Math key 2/2	24
Measure key	25
Run/Stop key.....	25
Save/Recall key 1/9	26
Save/Recall key 2/9	26
Save/Recall key 3/9	27
Save/Recall key 4/9	27
Save/Recall key 5/9	28
Save/Recall key 6/9	28
Save/Recall key 7/9	29
Save/Recall key 8/9	29
Save/Recall key 9/9	30
Trigger key 1/4	30

Trigger key 2/4	31
Trigger key 3/4	31
Trigger key 4/4	32
Utility key 1/4	32
Utility key 2/4	33
Utility key 3/4	33
Utility key 4/4	33
Default Settings.....	34
Built-in Help.....	35
MEASUREMENT	36
Basic Measurements	36
Activating a channel	36
Using the Autoset	37
Running and stopping the trigger	38
Changing the horizontal position and scale	39
Changing the vertical position and scale	40
Using the probe compensation signal	41
Automatic Measurements	43
Measurement items	43
Automatically measuring the input signals.....	45
Cursor Measurements	46
Using the horizontal cursors	46
Using the vertical cursors	47
Math Operations	48
Overview.....	48
Adding or subtracting signals	50
Using the FFT function	51
CONFIGURATION	52
Acquisition.....	52
Selecting the acquisition mode	52
Real time vs Equivalent time sampling mode.....	54
Display	55
Selecting the vector or dot drawing.....	55
Accumulating the waveform.....	55
Adjusting the display contrast	56
Selecting the display grid	56
Horizontal View	57
Moving the waveform position horizontally	57
Selecting the horizontal scale.....	57
Selecting the waveform update mode	58
Zooming the waveform horizontally.....	59

Viewing waveforms in the X-Y mode	60
Vertical View (Channel)	62
Moving the waveform position vertically	62
Selecting the vertical scale	62
Selecting the coupling mode	62
Inverting the waveform vertically	63
Limiting the waveform bandwidth	63
Selecting the probe attenuation level	64
Trigger	65
Trigger type	65
Trigger parameter	65
Configuring the edge trigger	68
Configuring the video trigger	69
Configuring the pulse width trigger	70
Manually triggering the signal	72
Remote Control Interface	73
System Settings	74
Viewing the system information	74
Selecting the language	74
SAVE/RECALL	75
File Structures	75
Display image file format	75
Waveform file format	75
Setup file format	77
Using the SD card file utilities	78
Quick Save (HardCopy)	80
Save	82
File type/source/destination	82
Saving the panel settings	83
Saving the waveform	84
Saving the display image	85
Saving all (panel settings, display image, waveform)	86
Recall	88
File type/source/destination	88
Recalling the default panel settings	88
Recalling a reference waveform to the display	90
Recalling panel settings	91
Recalling a waveform	92
MAINTENANCE	94
Vertical Resolution Calibration	94
Probe Compensation	95

FAQ	97
The input signal does not appear in the display	97
I want to remove some contents from the display	97
The waveform does not update (frozen)	97
The probe waveform is distorted	98
Autoset does not catch the signal well	98
I want to clean up the cluttered panel settings	98
The saved display image is too dark on the background	98
The accuracy does not match the specifications	98
The SD card slot does not accept my card	98
APPENDIX	99
Fuse Replacement	99
GDS-1000 Series Specifications	100
Model-specific specifications	100
Common specifications	101
Probe Specifications	103
INDEX	106

SAFETY INSTRUCTION

This chapter contains important safety instructions that should be followed when operating and storing the oscilloscope. Read the following before any operation to ensure your safety and to keep best condition for the oscilloscope.

Safety Symbols

These safety symbols may appear in this manual or on the oscilloscope.



WARNING

Warning: Identifies conditions or practices that could result in injury or loss of life.



CAUTION

Caution: Identifies conditions or practices that could result in damage to the oscilloscope or to other objects or property.



DANGER High Voltage



Attention: Refer to the Manual



Protective Conductor Terminal



Earth (Ground) Terminal

Safety Guidelines

General
Guideline



CAUTION

- Make sure the BNC input voltage does not exceed 300V peak.
- Never connect a hazardous live voltage to the ground side of the BNC connectors. It might lead to fire and electric shock.
- Do not place heavy objects on the oscilloscope.
- Avoid severe impacts or rough handling that may damage the oscilloscope.
- Avoid discharges of static electricity on or near the oscilloscope.
- Use only mating connectors, not bare wires, for the terminals.
- Do not block the cooling fan opening.
- Do not perform measurement at power source and building installation site (Note below).
- The oscilloscope should only be disassembled by a qualified technician.

(Measurement categories) EN 61010-1:2001 specifies the measurement categories and their requirements as follows. The GDS-1000 falls under category II.

- Measurement category IV is for measurement performed at the source of low-voltage installation.
- Measurement category III is for measurement performed in the building installation.
- Measurement category II is for measurement performed on the circuits directly connected to the low voltage installation.
- Measurement category I is for measurements performed on circuits not directly connected to Mains.

Power Supply



WARNING

- AC Input voltage: 100 ~ 240V AC, 47 ~ 63Hz
- The power supply voltage should not fluctuate more than 10%.
- Connect the protective grounding conductor of the AC power cord to an earth ground.

Fuse



WARNING

- Fuse type: T1A/250V
- To ensure fire protection, replace the fuse only with the specified type and rating.
- Disconnect the power cord before replacing the fuse.
- Make sure the cause of fuse blowout is fixed before replacing the fuse.

Cleaning the oscilloscope

- Disconnect the power cord before cleaning the oscilloscope.
- Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid into the oscilloscope.
- Do not use chemical containing harsh products such as benzene, toluene, xylene, and acetone.

Operation Environment

- Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below)
- Relative Humidity: < 80%
- Altitude: < 2000m
- Temperature: 0°C to 50°C

(Pollution Degree) EN 61010-1:2001 specifies the pollution degrees and their requirements as follows. the oscilloscope falls under degree 2.

Pollution refers to "addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity".

- Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.
- Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.
- Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.

Storage environment

- Location: Indoor
- Relative Humidity: < 85%
- Temperature: 0°C to 50°C

GETTING STARTED

The Getting started chapter introduces the oscilloscope's main features, appearance, and set up procedure.


Main Features




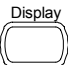
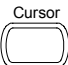
Model name	Frequency bandwidth	Input channels
5322DC	DC - 25MHz (-3dB)	2
5342DC	DC - 40MHz (-3dB)	2
5362DC	DC - 60MHz (-3dB)	2
5382DC	DC - 100MHz (-3dB)	2

Performance	<ul style="list-style-type: none"> • 250MSa/S real-time sampling rate • 25GS/s equivalent-time sampling rate • Up to 10ns peak detection
Feature	<ul style="list-style-type: none"> • 5.6 inch color TFT display • Saving and recalling setups and waveforms • 19 automatic measurements • Multi-language menu • Math operation: Add, Subtract, FFT • Edge, video, pulse width trigger • Compact size: (W) 310 x (D) 140 x (H) 142 mm
Interface	<ul style="list-style-type: none"> • SD card connector for saving and recalling data • Calibration output • External trigger input • SD card slave connector for remote control



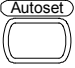
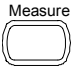


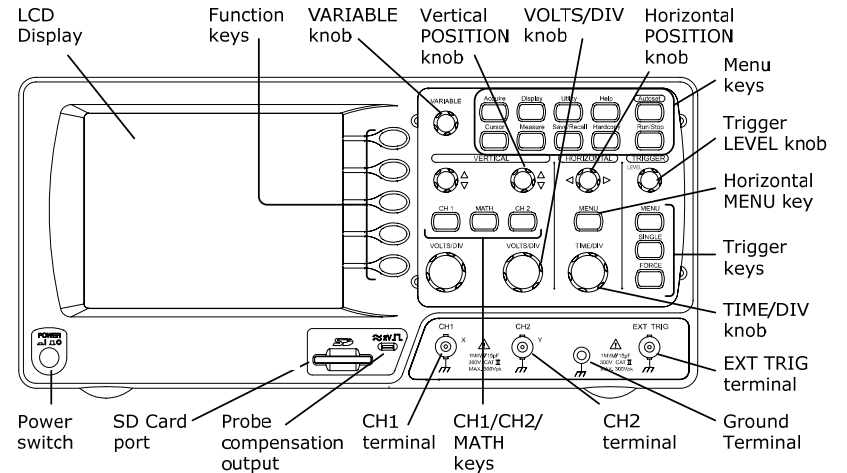


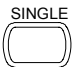


Panel Overview

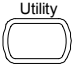






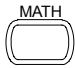




Front Panel




LCD display	TFT color, 320 x 234 resolution, wide angle view LCD display.
Function keys: F1 (top) to F5 (bottom)	 Activates the functions which appear in the left side of the LCD display.
Variable knob	 Increases or decreases value and moves to the next or previous parameter.
Acquire key	 Configures the acquisition mode (page52).
Display key	 Configures the display settings (page55).
Cursor key	 Runs cursor measurements (page46).

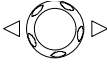(Continued on next page)

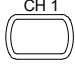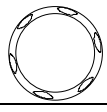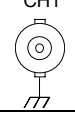
Utility key		Configures the Hardcopy function (page80), shows the system status (page72), selects the menu language (page74), runs the self calibration (page94), and configures the probe compensation signal (page95).
Help key		Shows the Help contents on the display (page35).
Autoset key		Automatically configures the horizontal, vertical, and trigger settings according to the input signal (page37).
Measure key		Configures and runs automatic measurements (page43).
Save/Recall key		Saves and recalls image, waveform, or panel settings (page75).
Hardcopy key		Copies image, waveform, or panel settings to an SD card (page80).
Run/Stop key		Runs or stops triggering (page38).
Trigger level knob		Sets the trigger level (page65).
Trigger menu key		Configures the trigger settings (page65).
Single trigger key		Selects the single trigger mode (page72).
Trigger force key		Acquires the input signal once regardless of the trigger condition at the time (page72).
Horizontal menu key		Configures the horizontal view (page57).

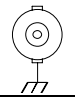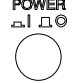Horizontal position knob		Moves the waveform horizontally (page57).
TIME/DIV knob		Selects the horizontal scale (page57).
Vertical position knob		Moves the waveform vertically (page62).
CH1/CH2 key		Configures the vertical scale and coupling mode for each channel (page62).
VOLTS/DIV knob		Selects the vertical scale (page62).
Input terminal		Accepts input signals: $1M\Omega \pm 2\%$ input impedance, BNC terminal.
Ground terminal		Accepts the DUT ground lead to achieve a common ground.
MATH key		Performs math operations (page48).
SD card connector		Facilitates transferring waveform data, display image, and panel settings (page75).
Probe compensation output		Outputs a 2Vp-p, square signal for compensating the probe (page95) or demonstration.
External trigger input		Accepts an external trigger signal (page65).
Power switch		Powers the oscilloscope on or off.

Rear Panel

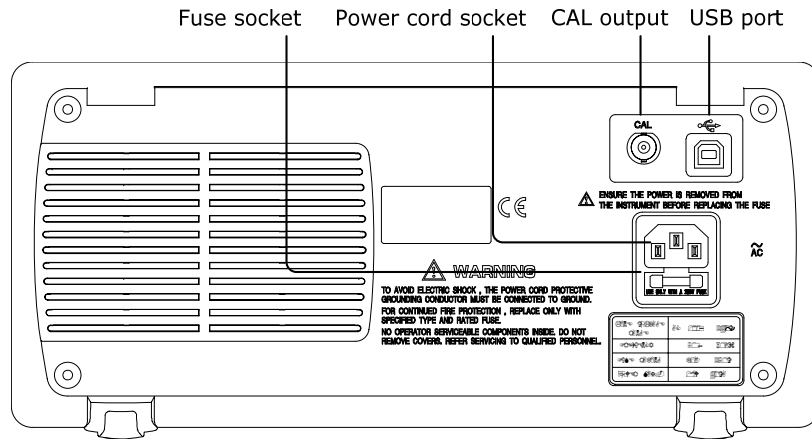


Power cord socket

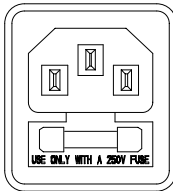

Power cord socket accepts the AC mains, 100 ~ 240V, 50/60Hz.

Fuse socket



Fuse socket holds the AC main fuse, T1A/250V.
For fuse replacement procedure, see page99.

USB slave port




Accepts a type B (slave) male USB connector for remote controlling the oscilloscope (page73).

Calibration output



Outputs the calibration signal used in vertical scale accuracy calibration (page94).

Display

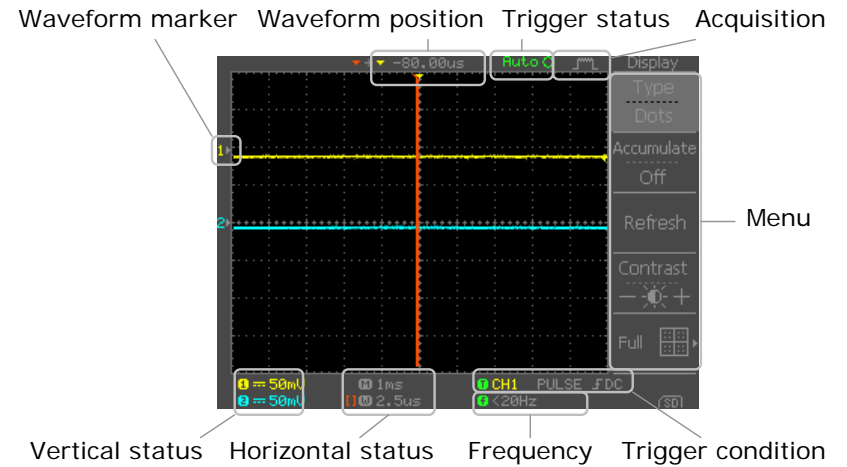

Waveforms	Channel 1: Yellow	Channel 2: Blue
Trigger status	Trig'd	A signal is being triggered
	Trig?	Waiting for a trigger condition
	Auto	Updating the input signal regardless of trigger conditions
	STOP	Triggering is stopped
	For trigger setting details, see page65.	
Input signal frequency	Updates the input signal frequency (the trigger source signal) in real-time. “< 20Hz” Indicates that the signal frequency is less than the lower frequency limit (20Hz) and thus not accurate.	
Trigger configuration	Shows the trigger source, type, and slope. In case of the Video trigger, shows the trigger source and polarity.	


Horizontal status Shows the channel configurations: coupling mode, vertical scale, and horizontal scale.
 Vertical status

Setting up the Oscilloscope

Background This section describes how to set up the oscilloscope properly including connecting a signal, adjusting the scale, and compensating the probe. Before operating the oscilloscope in a new environment, run these steps to make sure the oscilloscope is functionally stable.

Procedure


1. Connect the power cord.



2. Press the power switch. The display will become active in approximately 10 seconds.




3. Reset the system by recalling the factory settings. Press the Save/Recall key, then *Default Setup*. For details of factory settings, see page34.



4. Connect the probe between the Channel1 input terminal and probe compensation signal output (2Vp-p, 1kHz square wave).



5. Set the probe attenuation to x10.

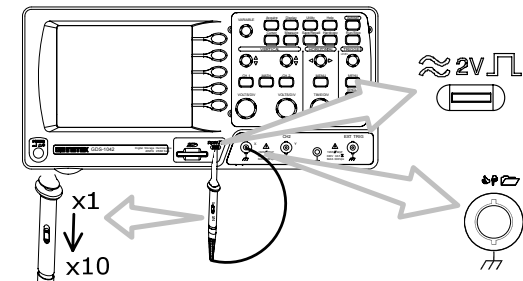



- Press the Autoset key. A square waveform will appear in the center of the display. For details of the Autoset, see page37.



- Press the Display key, then *Type* and select the vector waveform.



- Turn the adjustment point on the probe to flatten the square waveform edge.

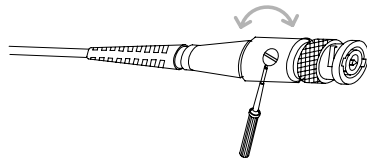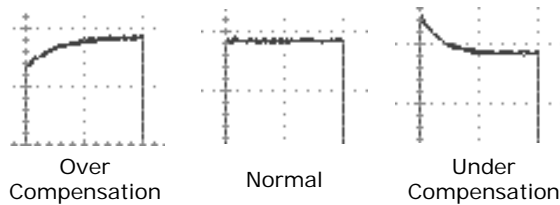

- Setting up the oscilloscope is completed. You may continue with the other operations.
Measurements: page36 Configurations: page52


QUICK REFERENCE

This chapter lists the oscilloscope menu tree, operation shortcuts, built-in help coverage, and default factory settings. Use this chapter as a handy reference to access the oscilloscope functionalities.


Menu Tree and Shortcuts

- Normal = Press the functional key for “Normal”
- Average = Repeatedly press the functional key for “Average”
- Normal ~ Average = Select a menu from “Normal” to “Average” and press its functionality key
- Normal → VAR = Press the functionality key for “Normal”, and then use the Variable knob

Acquire key

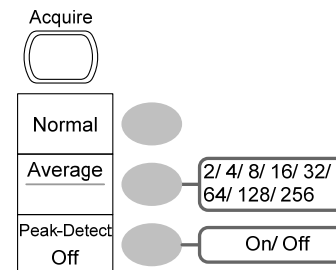

- Select acquisition mode
- Normal ~ Peak-Detect
- Select average number
- Average
- Turn peak detect on/off
- Peak-Detect




Autoset key





Automatically find signal and set scale Autoset



CH1/2 key





Turn channel on/off
CH 1/2





Select coupling mode
Coupling



Invert waveform
Invert




Invert
Turn bandwidth limit on/off
BW Limit





Select probe attenuation factor
Probe


Cursor key 1/2




Turn cursor on/off
Cursor




Move X1 cursor
X1 → VAR




Move X2 cursor
X2 → VAR



Move both X1 and X2 cursor
X1X2 → VAR





Switch to Y cursor
X ↔ Y




Cursor key 2/2




Turn cursor on/off
Cursor




Move Y1 cursor
Y1 → VAR




Move Y2 cursor
Y2 → VAR



Move both Y1 and Y2 cursor
Y1Y2 → VAR




Switch to X cursor
X ↔ Y




Display key




Select waveform type
Type



Waveform accumulate On/Off
Accumulate






Refresh accumulation
Refresh



Set display contrast
Contrast → VAR



Select display grid



Hardcopy key

Hardcopy → See Utility key (page32)




Help key



Turn help mode on/off
Help ↵

Horizontal menu key

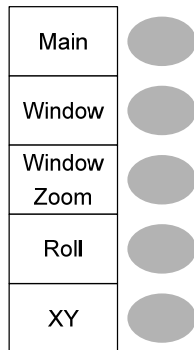

Select main (default) display
Main






Select window mode
Window → TIME/DIV ⌚

Zoom in window mode
Window Zoom

Select window roll mode
Roll

Select XY mode
XY

Math key 1/2

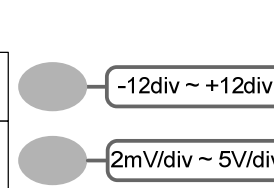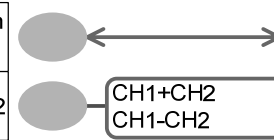

Math on/off
Math ↵






Select math operation type (+/-)
Operation ↵

Select addition/subtraction
CH1+/-CH2 ↵

Set result position
Position → VAR ⌚

Math result Volt/Div
Unit/Div → VAR ⌚

Math key 2/2

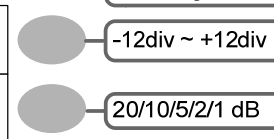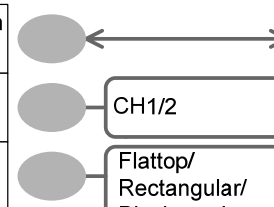

Math on/off
Math ↵

Select math operation type (FFT)
Operation ↵


Select FFT source channel
Source ↵

Select FFT window
Window ↵

Select FFT result position
Position → VAR ⌚

Select vertical scale
Unit/Div ↵

Measure key

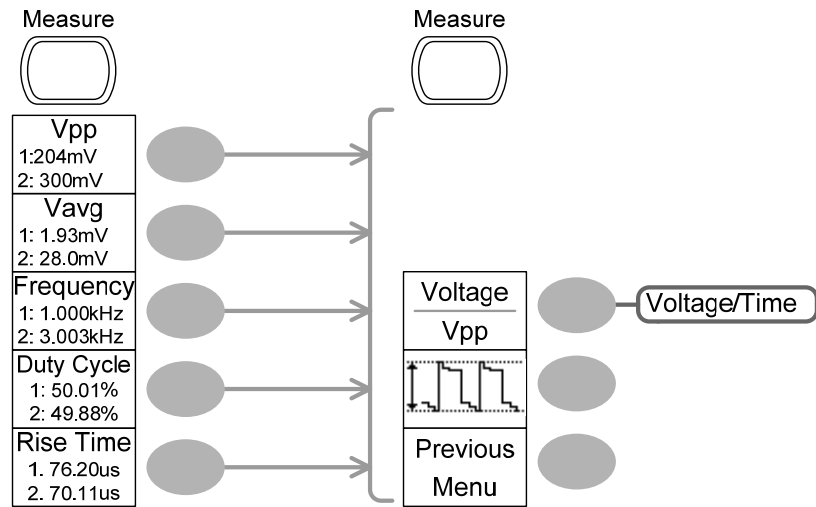


Turn on/off measurement	Measure ↵
Select measurement type	Voltage/Time ↵
Select measurement item	VAR ○ or Icon ↵
Go back to previous menu	Previous Menu

Run/Stop key


Run/Stop	Freeze/unfreeze waveform or trigger
	Run/Stop ↵

Save/Recall key 1/9

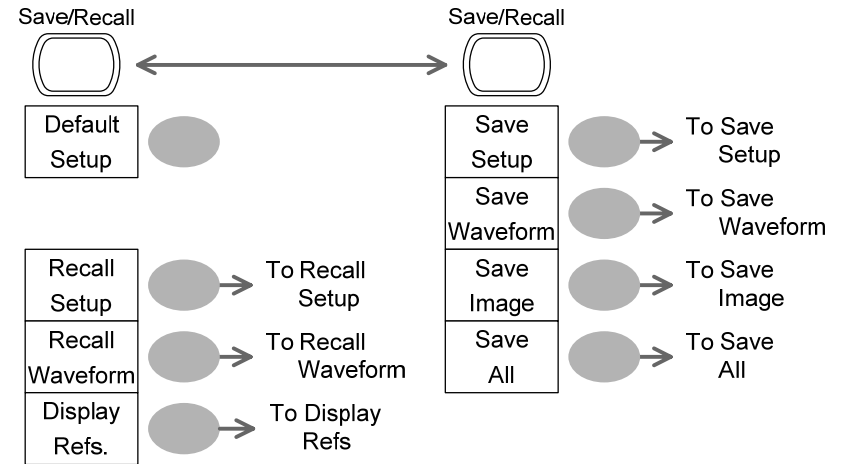

Switch to Save or Recall menu	Save/Recall ↵
Recall default setup	Default Setup


Save/Recall key 2/9

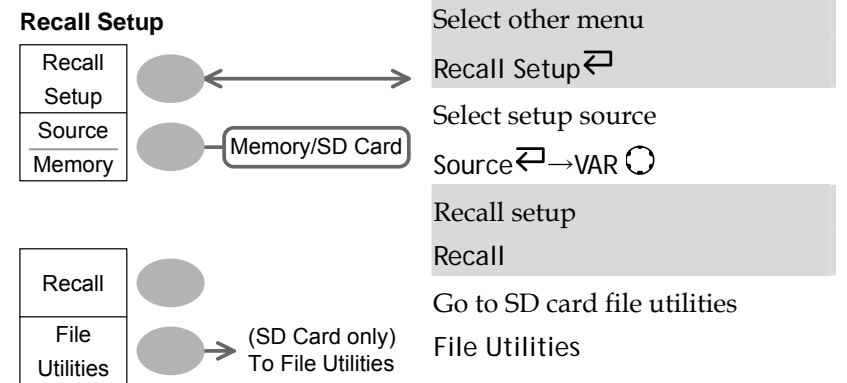

Recall Setup	Select other menu
Source Memory	Recall Setup ↵
Recall	Select setup source
	Source ↵ → VAR ○
	Recall setup
	Recall
	Go to SD card file utilities
	File Utilities


Save/Recall key 3/9

Recall Waveform

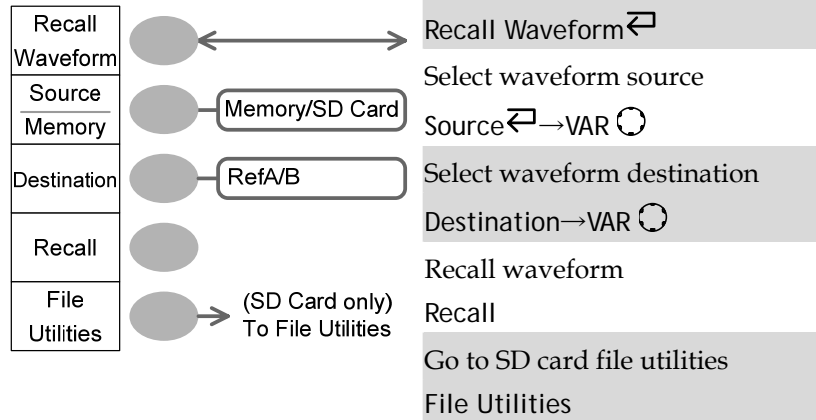


Save/Recall key 4/9

Display Refs.

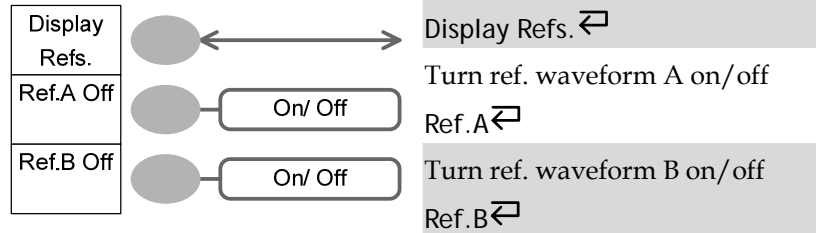


Save/Recall key 5/9

Save Setup

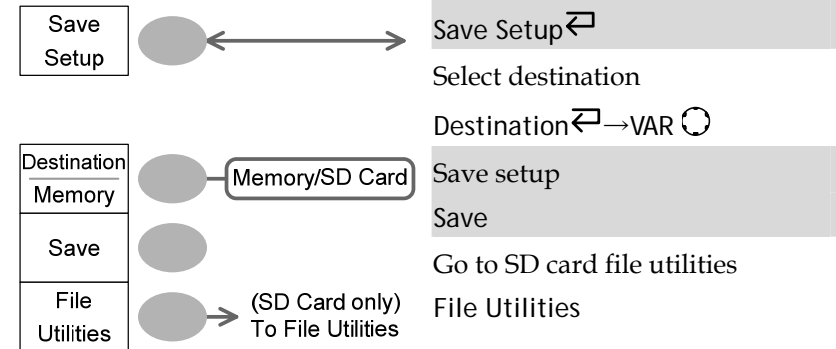


Save/Recall key 6/9

Save Waveform

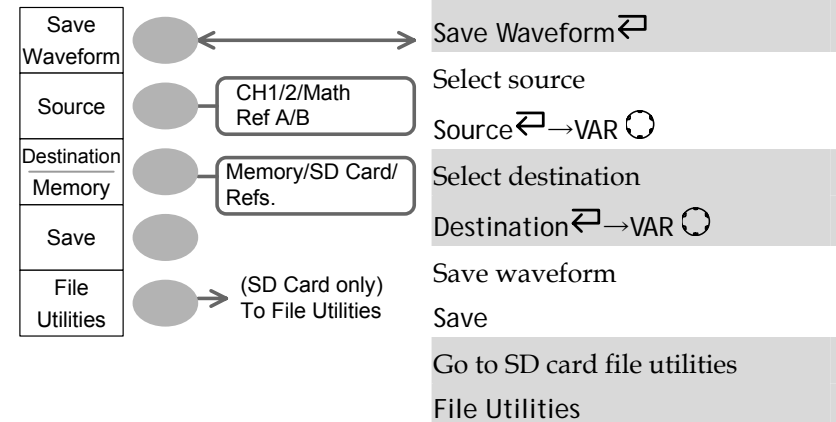


Save/Recall key 7/9

Save Image

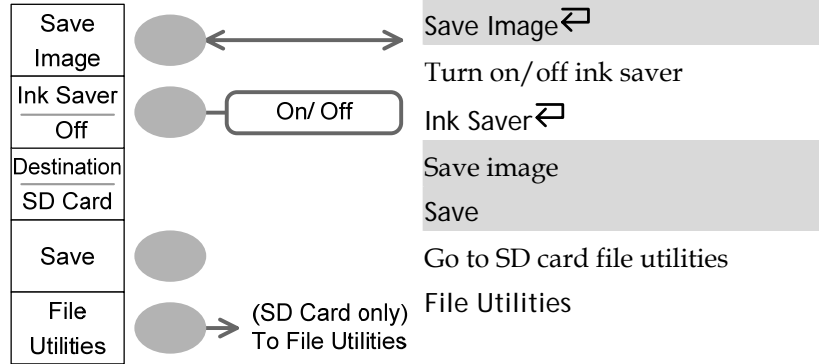


Save/Recall key 8/9

Save All

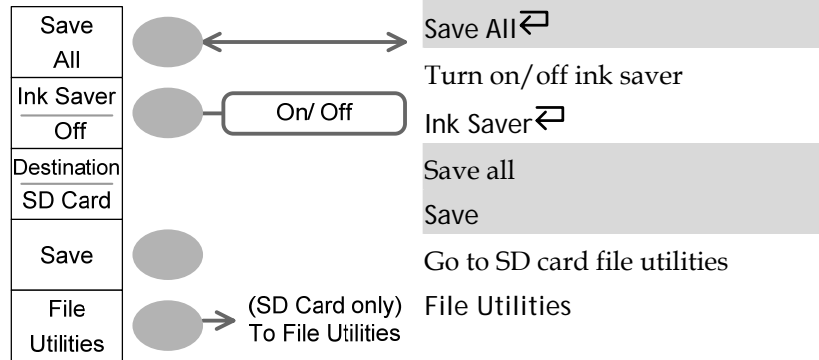


Save/Recall key 9/9

File Utilities

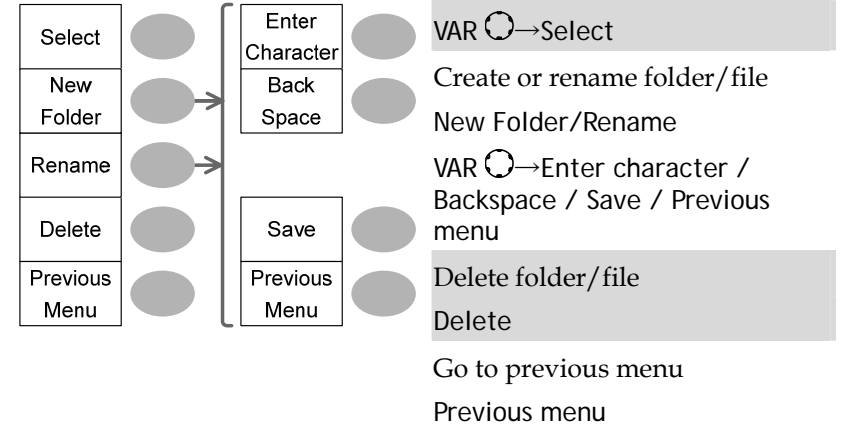


Trigger key 1/4

Video Trigger

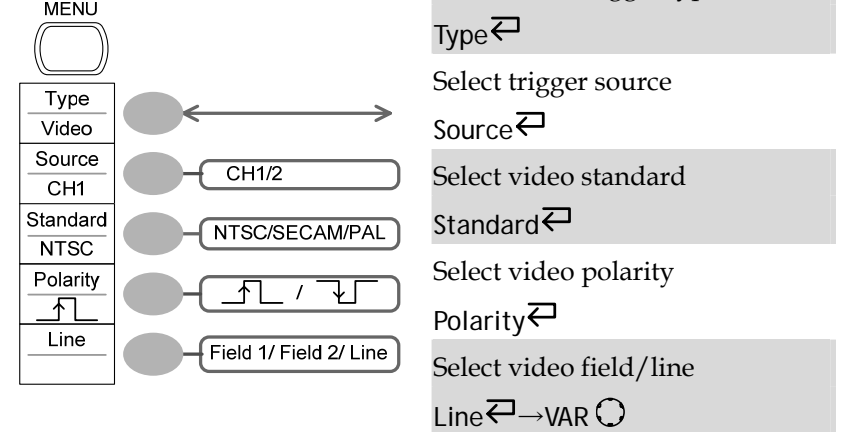


Trigger key 2/4

Edge Trigger

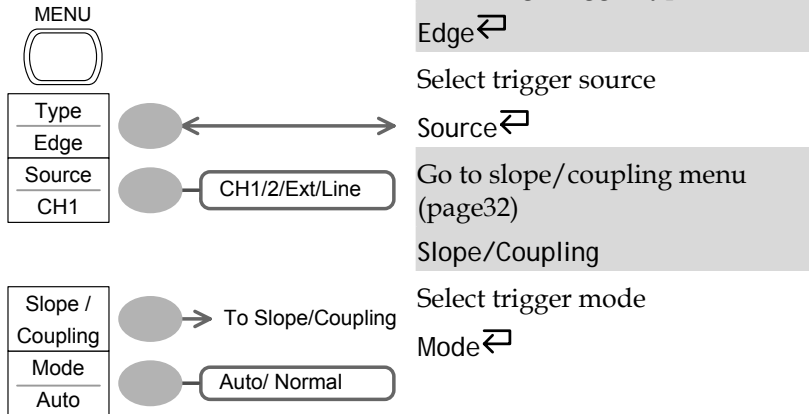


Trigger key 3/4

Pulse Trigger

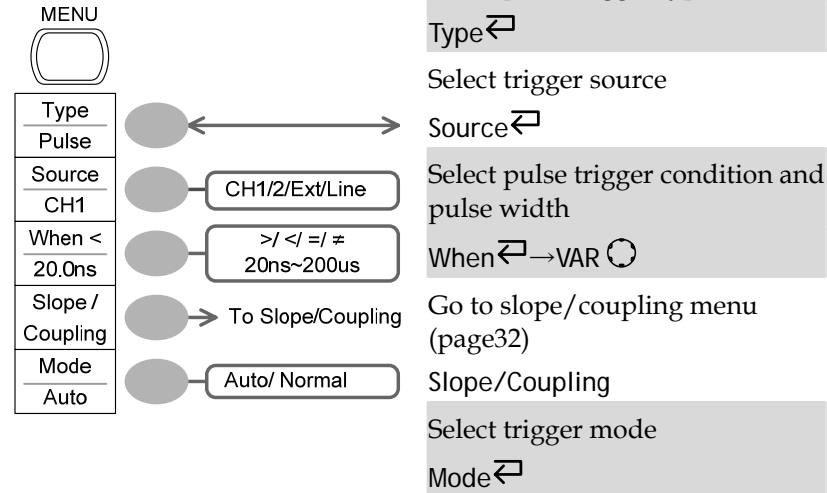


Trigger key 4/4

Coupling/Slope

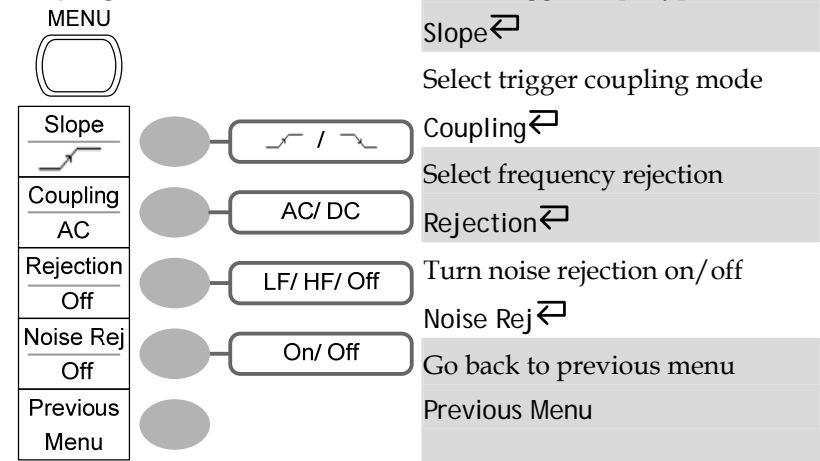


Utility key 1/4

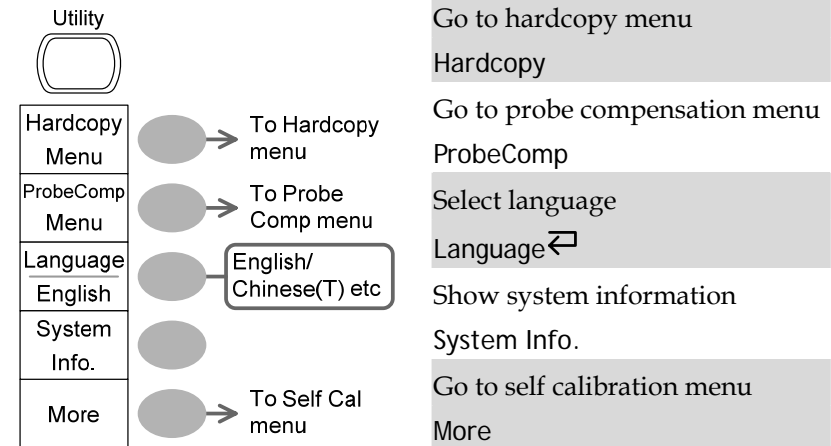


Utility key 2/4

Calibration



Enter self calibration
Self CAL




Go to previous menu
Previous Menu

Utility key 3/4


Hardcopy



Select Hardcopy function
Function



Turn on/off inksaver
Ink Saver



Go to previous menu
Previous Menu

Utility key 4/4

Probe compensation




Select probe compensation signal
Wave Type




Set frequency for square wave
Frequency → VAR



Set duty cycle for square wave
Duty Cycle → VAR




Go to previous menu



Previous Menu

Default Settings

Here are the factory installed panel settings which appear when pressing the Save/Recall key → *Default Setup.*




Acquisition	Mode: Normal	
Channel	Scale: 2V/Div	Invert: Off
	Coupling: DC	Probe attenuation: x1
	BW limit: Off	Channel 1 & 2: On
	(GDS-1102, GDS-1062)	
Cursor	Source: CH1	Cursor: Off
Display	Type: Vectors	Accumulate: Off
	Grid:	
Horizontal	Scale: 2.5us/Div	Mode: Main Timebase
Math	Type: + (Add)	Position: 0.00 Div
Measure	Item: Vpp, Vavg, Frequency, Duty Cycle, Rise Time	
Trigger	Type: Edge	Source: Channel1
	Mode: Auto	Slope:
	Coupling: DC	Rejection: Off
	Noise Rejection: Off	
Utility	Hardcopy: SaveImage, InkSaver Off	ProbeComp: Square wave, 1k, 50% duty cycle

Built-in Help

The Help key shows the contents of the built-in help support. When you press a function key, its descriptions appear in the display.



Applicable keys

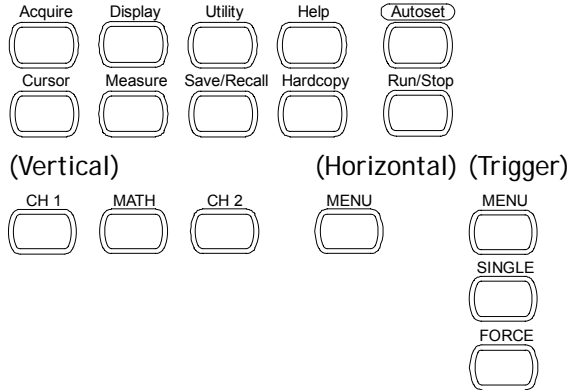

Procedure

1. Press the Help key. The display changes to the Help mode.
2. Press a functional key to access its help contents. (example: Acquire key)
3. Use the Variable knob to scroll the Help contents up and down.
4. Press the Help key again to exit the Help mode.



M EASUREMENT

The Measurement chapter describes how to properly observe a signal using the oscilloscope's basic functionalities, and how to observed a signal in detailed manners using one of the advanced functionalities: automatic measurements, cursor measurements, and math opetaions.


Basic Measurements

This section describes the basic operations required in capturing and viewing an input signal. For more detailed operations, see the following chapters.


- Measurements → from page36
- Configurations → from page52

Activating a channel

Activating a channel To activate an input channel, press the Channel key, CH1 or CH2. The channel indicator appears at the left side of the display and the channel icon changes accordingly.

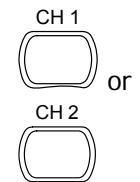

(Continued on next page)

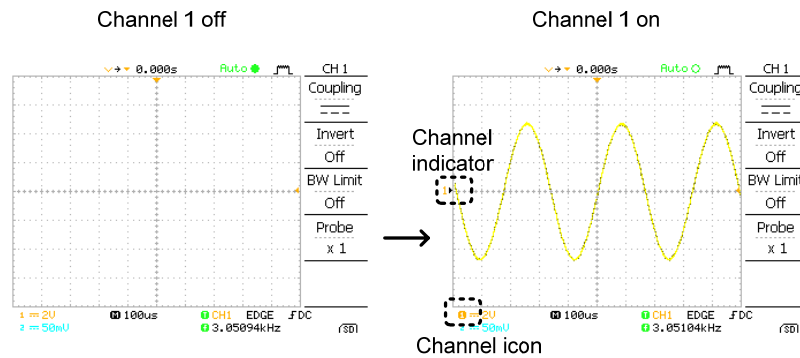



De-activating a channel To de-activate the channel, press the Channel key twice (once if the channel menu is already selected).


Using the Autoset


Background Autoset function automatically configures the panel settings to the best viewing conditions, in the following way.

- Selecting the horizontal scale
- Positioning the waveform horizontally
- Selecting the vertical scale
- Positioning the waveform vertically
- Selecting the trigger source channel
- Activating the channels

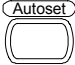- Procedure**
1. Connect the input signal to the oscilloscope and press the Autoset key. 
 2. The waveform appears in the center of the display.

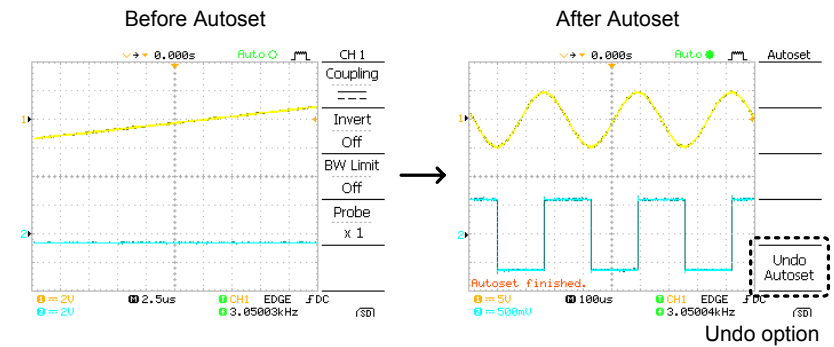

Undoing the Autoset To undo the Autoset, press *Undo* (available for 5 seconds). 

Adjusting the trigger level If the waveform is still unstable, try adjusting the trigger level up or down by using the Trigger Level knob. 


Limitation Autoset does not work in the following situation.

- Input signal frequency less than 20Hz
- Input signal amplitude less than 30mV


Running and stopping the trigger

Background In the trigger Run mode, the oscilloscope constantly searches for a trigger condition and updates the signal into the display when the condition is met.

In the trigger Stop mode, the oscilloscope stops triggering and thus the last acquired waveforms stay in the display. The trigger icon at the top of the display changes into Stop mode.

Pressing the Trigger Run/Stop key  switches between the Run and Stop mode.

(Continued on next page)

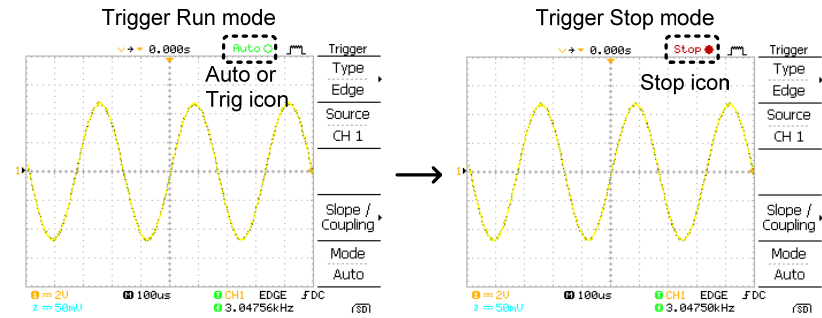

Waveform operation


Waveforms can be moved or scaled in both the Run and Stop mode. For details, see page57 (Horizontal position/scale) and page62 (Vertical position/scale).

Changing the horizontal position and scale

For more detailed configurations, see page57.

Setting the horizontal position

The horizontal position knob moves the waveform left or right. The position indicator moves along with the waveform and the distance from the center point is displayed as the offset in the upper side of the display.

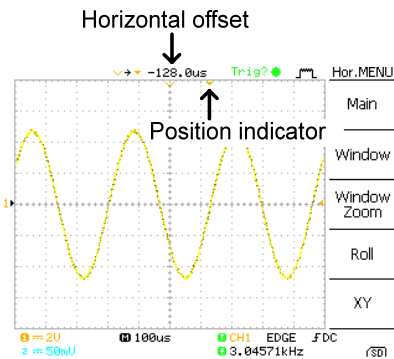


Selecting the horizontal scale

To select the timebase (scale), turn the TIME/DIV knob; left (slow) or right (fast).



Range 1ns/Div ~ 10s/Div, 1-2-5 increment

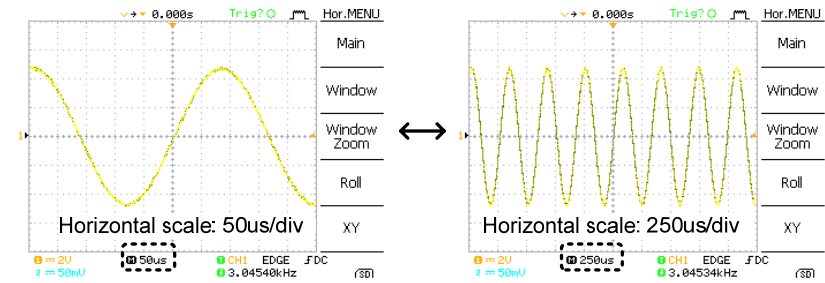

Changing the vertical position and scale

For more detailed configuration, see page62.

Set vertical position

To move the waveform up or down, turn the vertical position knob for each channel.



As the waveform moves, the vertical position of the cursor appears at the bottom left corner of the display.

Run/Stop mode The waveform can be moved vertically in both Run and Stop mode.

Select vertical scale

To change the vertical scale, turn the VOLTS/DIV knob; left (down) or right (up).



Range 2mV/Div ~ 5V/Div, 1-2-5 increments



The vertical scale indicator for each channel on the bottom left of the display changes accordingly.

Stop mode In Stop mode, the vertical scale setting can be changed but the waveform shape stays the same.

Using the probe compensation signal


Background This section introduces how to use the probe compensation signal for general usage, in case the DUT signal is not available or to get a second signal for comparison. For probe compensation details, see page95.


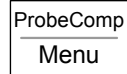
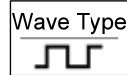
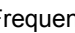
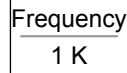

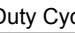
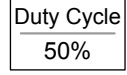

Note that the frequency accuracy and duty factor are not guaranteed. Therefore the signal should not be used for reference purpose.

Waveform type		Square waveform used for probe compensation. 1k ~ 100kHz, 5% ~ 95%.
		Demonstration signal for showing the effects of peak detection. See page52 for peak detection mode details.

View the probe compensation waveform

1. Connect the probe between the compensation signal output and Channel input.

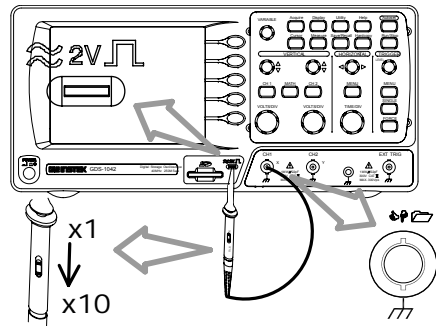

2. Press the Utility key. 
3. Press *ProbeComp*. 
4. Press Wave type repeatedly to select the wave type. 
5. (For  only) To change the frequency, press *Frequency* and use the Variable knob. 

 Range 1kHz ~ 100kHz
6. (For  only) To change the duty cycle, press *Duty Cycle* and use the Variable knob. 

 Range 5% ~ 95%



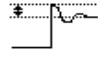
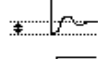
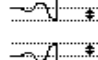
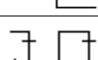
Probe compensation For probe compensation details, see page95.

Automatic Measurements

Automatic measurement function measures input signal attributes and updates them in the display.

Measurement items

Overview	Voltage type	Time type
	Vpp	Frequency
	Vmax	Period
	Vmin	RiseTime
	Vamp	FallTime
	Vhi	+Width
	Vlo	-Width
	Vavg	Dutycycle
	Vrms	
	ROVShoot	
	FOVShoot	
	RPREShoot	
	FPREShoot	
Voltage measurement items		
	Vpp	Difference between positive and negative peak voltage (=Vmax - Vmin)
	Vmax	Positive peak voltage.
	Vmin	Negative peak voltage.
	Vamp	Difference between global high and global low voltage (=Vhi - Vlo)
	Vhi	Global high voltage.
	Vlo	Global low voltage.

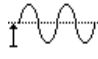Vavg		Averaged voltage of the first cycle.
Vrms		RMS (root mean square) voltage.
ROVShoot		Rise overshoot voltage.
FOVShoot		Fall overshoot voltage.
RPREShoot		Rise preshoot voltage.
FPREShoot		Fall preshoot voltage.

Time measurement items	Time type	Description
	Freq	Frequency of the waveform.
	Period	Waveform cycle time (=1/Freq).
	Risetime	Rising time of the pulse (~90%).
	Falltime	Falling time of the pulse (~10%).
	+Width	Positive pulse width.
	-Width	Negative pulse width.
	Duty Cycle	Ratio of signal pulse compared with whole cycle =100x (Pulse Width/Cycle)


Automatically measuring the input signals

Viewing the measurement result

1. Press the Measure key.



2. The measurement results appear on the menu bar, constantly updated. Press the menu to change its measurement item.

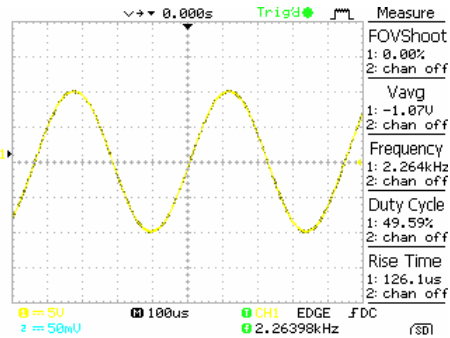

Selecting a measurement item


1. Press F3 repeatedly to select the measurement type: *Voltage or Time.*



2. Use the Variable knob to select the measurement item.



3. Press *Previous Menu* to confirm the item selection and to go back to the measurement results view.



Cursor Measurements

Cursor line, horizontal or vertical, shows the precise position of the input waveforms or math operation result.


Using the horizontal cursors

Procedure


1. Press the Cursor key. The cursors appear in the display.



2. Press X↔Y to select the horizontal (X1&X2) cursor.



3. Press *Source* repeatedly to select the source channel.



Range CH1, 2, Math


4. The cursor measurement results will appear in the menu, F2 to F4.

Parameters


X1	Time position of the left cursor
X2	Time position of the right cursor
Δ	The distance between the X1 and X2
f	The time distance converted to frequency

Moving the horizontal cursors


To move the left cursor, press X1 and then use the Variable knob.






To move the right cursor, press X2 and then use the Variable knob.



To move both cursors at once, press X1X2 and then use the Variable knob.



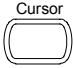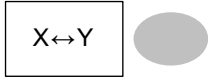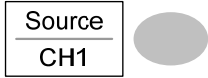


Using the vertical cursors

- Procedure
1. Press the Cursor key. 
 2. Press X↔Y to select the vertical (Y1&Y2) cursor. 
 3. Press *Source* repeatedly to select the source channel. 

Range CH1, 2, Math
 4. The cursor measurement results will appear in the menu.

Parameters	Y1	Voltage level of the upper cursor
	Y2	Voltage level of the lower cursor
	Δ	The voltage difference between the upper and lower cursor

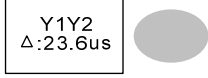- Moving the vertical cursors
- To move the upper cursor, press Y1 and then use the Variable knob. 
 - To move the lower cursor, press Y2 and then use the Variable knob. 
 - To move both cursors at once, press Y1Y2 and then use the Variable knob. 

Math Operations







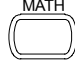
The Math operations can add, subtract, or perform FFT on the input waveforms. The resulted waveform can be measured using the cursors, and saved or recalled just like normal input signals.

Overview



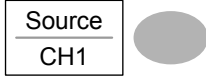





Addition (+)	Adds amplitude of CH1 & CH2 signals.	
Subtraction (-)	Extracts the amplitude difference between CH1 & CH2.	
FFT	Runs FFT calculation on a signal. Four types of FFT windows are available: Hanning, Flattop, Rectangular, and Blackman.	
Hanning FFT window	Frequency resolution	Good
	Amplitude resolution	Not good
	Suitable for...	Frequency measurement on periodic waveforms
Flattop FFT window	Frequency resolution	Not good
	Amplitude resolution	Good
	Suitable for...	Amplitude measurement on periodic waveforms
Rectangular FFT window	Frequency resolution	Very good
	Amplitude resolution	Bad
	Suitable for...	Single-shot phenomenon (this mode is the same as having no window at all)

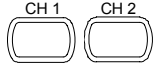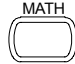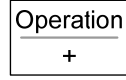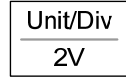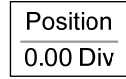Blackman FFT window	Frequency resolution	Bad
	Amplitude resolution	Very good
	Suitable for...	Amplitude measurement on periodic waveforms

Adding or subtracting signals

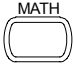- Procedure
1. Activate both CH1 and CH2. 
 2. Press the Math key. 
 3. Press *Operation* repeatedly to select addition (+) or subtraction (-). 
 4. The math measurement result appears in the display. 
 5. To move the math result vertically, press *Position* and use the Variable knob. 

 6. To clear the math result from the display, press the Math key again. 

Using the FFT function

- | | | |
|-----------|--|---|
| Procedure | 1. Press the Math key. |  |
| | 2. Press <i>Operation</i> repeatedly to select FFT. |  |
| | 3. Press <i>Source</i> repeatedly to select the source channel. |  |
| | 4. Press <i>Window</i> repeatedly to select the FFT window type. |  |
| | 5. The FFT result appears. The horizontal scale changes from time to frequency, and the vertical scale from voltage to dB. | |
| | 6. To move the FFT waveform vertically, press <i>Position</i> and use the Variable knob. |  |
| | |  |
| | Range | -12.00 Div ~ +12.00 Div |
| | 7. To select the vertical scale of FFT waveform, press <i>Unit/Div</i> repeatedly. |  |
| | Range | 1, 2, 5, 10, 20 dB/Div |
| | 8. To clear the FFT result from the display, press the Math key again. |  |


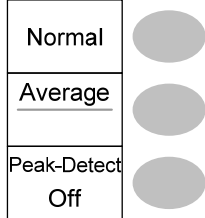
C ONFIGURATION

The Configuration chapter describes how to configure panel settings to make measurements and observations suited to the application needs.

Acquisition

The acquisition process samples the analog input signals and converts them into digital format for internal processing. You may select the normal, average, or peak detect acquisition mode.

Selecting the acquisition mode

- | | | |
|-----------|--|--|
| Procedure | 1. Press the Acquire key. |  |
| | 2. Select the acquisition mode between <i>Normal</i> , <i>Average</i> and <i>Peak Detect</i> . |  |
| Range | Normal | All of the acquired data is used to draw the waveform. |

Average	Multiple data are averaged to form a waveform. This mode is useful for drawing a noise-free waveform. To select the number, press <i>Average</i> repeatedly. Average number: 2, 4, 8, 16, 32, 64, 128, 256
Peak detect	To activate the Peak detect mode, press <i>Peak-Detect</i> . Only the minimum and maximum value pairs for each acquisition interval (bucket) are used. This mode is useful for catching abnormal glitches in the signal.

Peak detect effect using the probe comp. waveform


- One of the probe compensation waveforms can demonstrate the peak detection mode. Connect the probe to the probe compensation output.



- Press the Utility key.



- Press *ProbeComp*.



- Press *Wave Type* and select the \square waveform.



- Press the Autoset key. the oscilloscope positions the waveform in the center of the display.




- Press the Acquire key.



- Press *Normal*.




- Press *Peak-Detect* and see that a spike noise is captured.



Example

The peak detect mode reveals the occasional glitch.

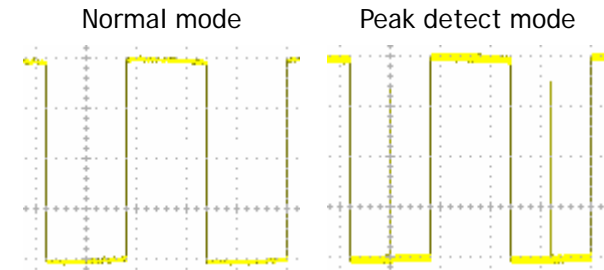

Real time vs Equivalent time sampling mode

Backgrounds

The oscilloscope automatically switches between two sampling modes, Real-time and Equivalent-time, according to the number of active channels and sampling rate.

Real-time sampling

One sampled data is used to reconstruct a single waveform. Short-time events might get lost if the sampling rate gets too high. This mode is used when the sampling rate is relatively low (250MSa/s or lower).



Equivalent-time sampling

Multiple numbers of sampled data are accumulated to reconstruct a single waveform. Restores greater waveform details but takes longer to update the waveform. This mode is used when the sampling rate becomes higher than 250MSa/s. The maximum equivalent-time sampling rate is 25GSa/s.

Display

The Display section describes how to configure the display settings: drawing type, waveform accumulation, contrast adjustment, and grid settings.




Selecting the vector or dot drawing

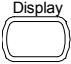- Procedure
1. Press the Display key. 
 2. Press *Type* repeatedly to select the waveform drawing. 

Types	Dots	Only the sampled dots are displayed.
	Vectors	The sampled dots are connected by lines.


Accumulating the waveform

Background Accumulation preserves the old waveform drawings and overwrites new waveforms on top of it. It is useful for observing waveform variation.

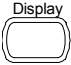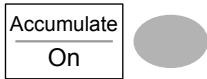


- Procedure
1. Press the Display key. 
 2. Press *Accumulate* to turn on the waveform accumulation. 
 3. To clear the accumulation and start it over (refresh), press *Refresh*. 

(Continued on next page)


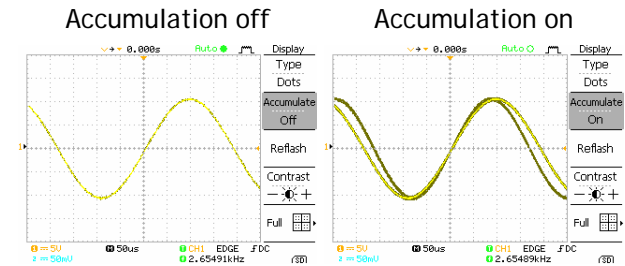
Example



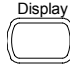


Adjusting the display contrast

- Procedure
1. Press the Display key. 
 2. Press *Contrast*. 
 3. Turn the Variable knob left to lower the contrast (dark display) or right to raise the contrast (bright display). 

Selecting the display grid

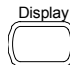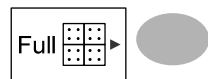- Procedure
1. Press the Display key. 
 2. Press the grid icon repeatedly to select the grid. 

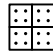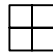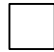Parameters		Shows the full grid.
		Shows the outer frame and X/Y axis.
		Shows only the outer frame.



Horizontal View

The Horizontal view section describes how to configure the horizontal scale, position, waveform update mode, window zoom, and X-Y mode.

Moving the waveform position horizontally

Procedure

The horizontal position knob moves the waveform left or right. The position indicator at the top of the display shows the center and current position.

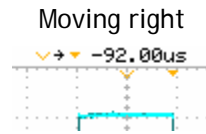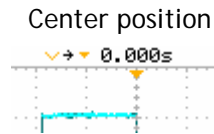

Selecting the horizontal scale


Select horizontal scale

To select the timebase (scale), turn the TIME/DIV knob; left (slow) or right (fast).



Range 1ns/Div ~ 10s/Div, 1-2-5 increment

The timebase indicator at the bottom of the display updates the current horizontal scale.



Selecting the waveform update mode

Background	The display update mode is switched automatically or manually according to the horizontal scale.
Main mode	Updates the whole displayed waveform at once. The main mode is automatically selected when the horizontal scale (timebase) is fast. Horizontal scale $\leq 100\text{ms}/\text{div}$ Trigger All mode available
Roll mode	Updates and moves the waveform gradually from the right side of the display to the left. The Roll mode is automatically selected when the horizontal scale (timebase). When in the Roll mode, an indicator appears at the bottom of the display.
	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>Main mode</p> </div> <div style="text-align: center;"> <p>Roll mode</p> </div> </div>
	Timebase $\geq 250\text{ms}/\text{div}$ ($\leq 100\text{Sa}/\text{s}$)
	Trigger Auto mode only

Selecting the Roll mode manually

1. Press the Horizontal menu key.



2. Press *Roll*. The horizontal scale automatically becomes 250ms/div and the waveform starts scrolling from the right side of the display (If the oscilloscope is already in the Roll mode, there will be no change).



Zooming the waveform horizontally

Procedure/
range


1. Press the Horizontal Menu key.



2. Press *Window*.



3. Use the horizontal position knob to move the zoom range sideways, and TIME/DIV knob to change the zoom range width.




The width of the bar in the middle of the display is the actual zoomed area.

Zoom range 1ns ~ 1ms

4. Press *Window Zoom*. The specified range gets zoomed.



Example

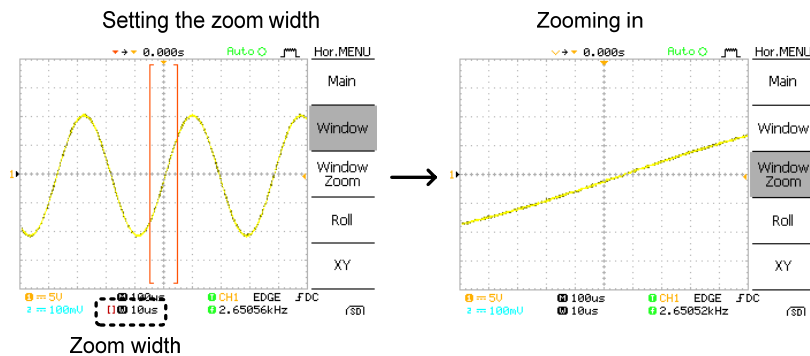

Viewing waveforms in the X-Y mode

Background


The X-Y mode compares the voltage of Channel 1 and Channel 2 waveforms in a single display. This mode is useful for observing the phase relationship between the two waveforms.

Procedure

1. Connect the signals to Channel 1 (X-axis) and Channel 2 (Y-axis).



2. Make sure both Channel 1 and 2 are activated.



3. Press the Horizontal key.




4. Press XY. The display shows two waveforms in X-Y format; Channel 1 as X-axis, Channel 2 as Y-axis.



Adjusting the X-Y mode waveform

Horizontal position	CH1 Position knob
Horizontal scale	CH1 Volts/Div knob
Vertical position	CH2 Position knob
Vertical scale	CH2 Volts/Div knob


Example

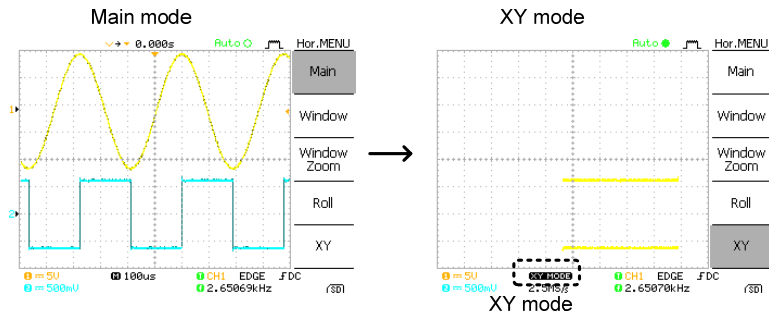


Vertical View (Channel)

The Vertical view section describes how to set the vertical scale, position, bandwidth limitation, coupling mode, and attenuation.

Moving the waveform position vertically

Procedure To move the waveform up or down, turn the vertical position knob for each channel. 



Selecting the vertical scale

Procedure To change the vertical scale, turn the VOLTS/DIV knob; left (down) or right (up). 



Range 2mV/Div ~ 5V/Div, 1-2-5 increments

Selecting the coupling mode

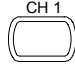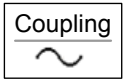Procedure

1. Press the Channel key. 
2. Press *Coupling* repeatedly to select the coupling mode. 

Range

-  DC coupling mode. The whole portion (AC and DC) of the signal appears on the display.
-  Ground coupling mode. The display shows only the zero voltage level as a horizontal line. This mode is useful for measuring the signal amplitude with respect to the ground level.



AC coupling mode. Only the AC portion of the signal appears on the display. This mode is useful for observing AC waveforms mixed with DC signal.




Inverting the waveform vertically

Procedure

1. Press the Channel key.



2. Press *Invert*. The waveform becomes inverted (upside down) and the Channel indicator in the display shows a down arrow.

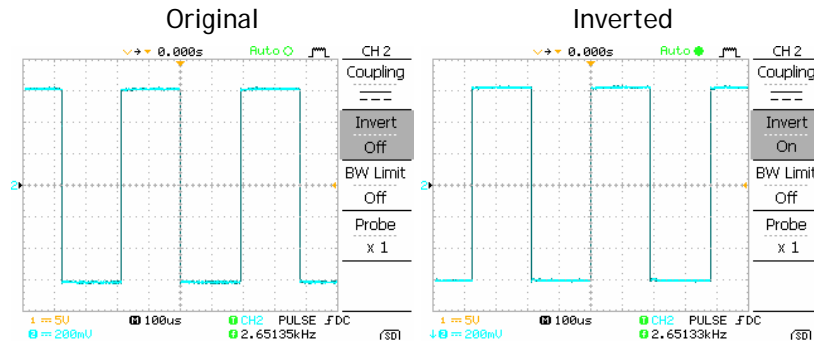

Limiting the waveform bandwidth

Background


Bandwidth limitation puts the input signal into a 20MHz (-3dB) low-pass filter. This function is useful for cutting off high frequency noise to see the clear waveform shape. This function is available only for GDS-1102 and GDS-1062.

Procedure

1. Press the Channel key.





2. Press *BW Limit* to turn on or off the limitation. When turned on, the BW indicator appears next to the Channel indicator in the display.



Example

BW Limit Off

BW Limit On

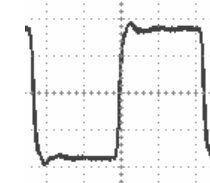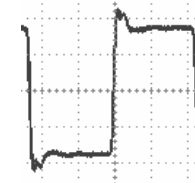

Selecting the probe attenuation level

Background


A signal probe has an attenuation switch to lower the original DUT signal level to the oscilloscope input range, if necessary. The probe attenuation selection adjusts the vertical scale so that the voltage level on the display reflects the real value, not the attenuated level.

Procedure

1. Press the Channel key.



2. Press *Probe* repeatedly to select the attenuation level.



3. The voltage scale in the channel indicator changes accordingly. There is no change in the waveform shape.

Range

x1, x10, x100

Note

The attenuation factor adds no influence on the real signal; it only changes the voltage scale on the display.

Trigger

The Trigger function configures the conditions by which the oscilloscope captures the incoming signals.


Trigger type

Edge	Triggers when the signal crosses an amplitude threshold in either positive or negative slope.						
Video	Extracts a sync pulse from a video format signal and triggers on a specific line or field.						
Pulse	Triggers when the pulse width of the signal matches the trigger settings.						
Indicators	<table border="0"> <tr> <td style="text-align: center;">Edge/Pulse</td> <td style="text-align: center;">Video</td> </tr> <tr> <td style="text-align: center;"> </td> <td style="text-align: center;"> </td> </tr> <tr> <td style="text-align: center;">(CH1, Edge, Rising edge, DC coupling)</td> <td style="text-align: center;">(CH1, Video, Positive polarity, NTSC standard)</td> </tr> </table>	Edge/Pulse	Video			(CH1, Edge, Rising edge, DC coupling)	(CH1, Video, Positive polarity, NTSC standard)
Edge/Pulse	Video						
(CH1, Edge, Rising edge, DC coupling)	(CH1, Video, Positive polarity, NTSC standard)						

Trigger parameter

Trigger source	CH1, 2	Channel 1, 2 input signals
Line		AC mains signal
Ext		External trigger input signal
Trigger mode	Auto	The oscilloscope updates the input signal regardless of the trigger conditions (if there is no trigger event, the oscilloscope generates an internal trigger). Select this mode especially when viewing rolling waveforms at a slow timebase.

The Auto trigger status appears in the upper right corner of the display.



Single The oscilloscope acquires the input signals once when a trigger event occurs, then stops acquiring. Pressing the Single key triggers on the input signals again.



The Single trigger status appears in the upper right corner of the display.






Normal The oscilloscope acquires and updates the input signals only when a trigger event occurs.




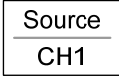

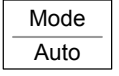

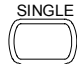
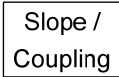

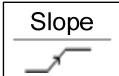

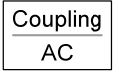

The Normal trigger status appears in the upper right corner of the display.





Video standard (video trigger)	NTSC	National Television System Committee
	PAL	Phase Alternative by Line
	SECAM	SEquential Couleur A Mémoire
Sync polarity (video trigger)		Positive polarity
		Negative polarity
Video line (video trigger)	field	1 or 2
	line	1~263 for NTSC, 1~313 for PAL/SECAM
Pulse condition (pulse trigger)		Sets the pulse width (20ns ~ 200us) and the triggering condition.

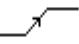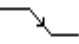
	>	Longer than	=	Equal to
	<	Shorter than	≠	Not equal to
Trigger slope		Triggers on the rising edge.		
		Triggers on the falling edge.		
Trigger coupling	AC	Triggers only on AC component.		
	DC	Triggers on AC+DC component.		
Frequency rejection	LF	Puts a high-pass filter and rejects the frequency below 50kHz.		
	HF	Puts a low-pass filter and rejects the frequency above 50kHz.		
Noise rejection	Rejects noise signals.			
Trigger level		Using the trigger level knob moves the trigger point up or down.		

Configuring the edge trigger

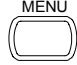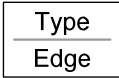
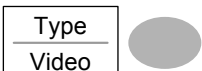
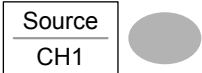
- Procedure
1. Press the Trigger menu key. 
 2. Press *Type* repeatedly to select edge trigger.  
 3. Press *Source* repeatedly to select the trigger source.  
Range Channel 1, 2, Line, Ext
 4. Press *Mode* repeatedly to select the Auto or Normal trigger mode. To select the Single trigger mode, press the Single key.  

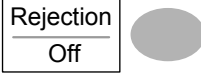Range Auto, Normal, Single
 5. Press *Slope/coupling* to enter into the trigger slope and coupling selection menu.  
 6. Press *Slope* repeatedly to select the trigger slope, rising or falling edge.  
Range Rising edge, falling edge
 7. Press *Coupling* repeatedly to select the trigger coupling, DC or AC.  
Range DC, AC


- 8. Press *Rejection* to select the frequency rejection mode. 

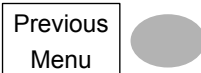
Range LF, HF, Off
- 9. Press *Noise Rej* to turn the noise rejection on or off. 


Range On, Off
- 10. Press *Previous* menu to go back to the previous menu. 

Configuring the video trigger

- Procedure
- 1. Press the Trigger menu key. 
 - 2. Press *Type* repeatedly to select video trigger. The video trigger indicator appears at the bottom of the display. 
 - 3. Press *Source* repeatedly to select the trigger source channel. 

Range Channel 1, 2
 - 4. Press *Standard* repeatedly to select the video standard. 


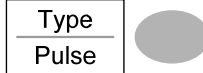
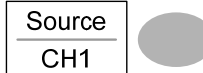
Range NTSC, PAL, SECAM
 - 5. Press *Polarity* repeatedly to select the video signal polarity. 

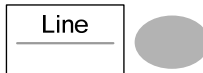
- Range positive, negative
- 6. Press *Line* repeatedly to select the video field line. Use the Variable knob to select the video line. 

Field 1, 2

Video line NTSC: 1 ~ 262 (Even), 1 ~ 263 (Odd)
PAL/SECAM: 1 ~ 312 (Even), 1 ~ 313 (Odd)

Configuring the pulse width trigger

- Procedure
- 1. Press the Trigger menu key. 
 - 2. Press *Type* repeatedly to select pulse width trigger. The pulse width trigger indicator appears at the bottom of the display. 
 - 3. Press *Source* repeatedly to select the trigger source. 

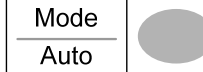Range Channel 1, 2, Ext
 - 4. Press *Mode* repeatedly to select the trigger mode, Auto or Normal. To select the Single trigger mode, press the Single key. 

Range Auto, Normal, Single

5. Press *When* repeatedly to select the pulse condition. Then use the Variable knob to set the pulse width.

When <
20.0ns

Condition > , < , = , ≠
Width 20ns ~ 200us

6. Press *Slope/Coupling* to set trigger slope and coupling.

Slope /
Coupling

7. Press *Slope* repeatedly to select the trigger slope, which also appears at the bottom of the display.

Slope

Range Rising edge, falling edge

8. Press *Coupling* repeatedly to select the trigger coupling.

Coupling
AC

Range DC, AC

9. Press *Rejection* to select the frequency rejection mode.

Rejection
Off

Range LF, HF, Off

10. Press *Noise Rej* to turn the noise rejection on or off.

Noise Rej
Off

Range On, Off

11. Press *Previous* menu to go back to the previous menu.

Previous
Menu

Manually triggering the signal


Note This section describes how to manually trigger the input signals when the oscilloscope does not capture them. This section applies to the Normal and Single trigger mode, since in the Auto trigger mode, the oscilloscope keeps updating the input signal regardless of the trigger conditions.

- | | | |
|--|--|------|
| To acquire the signal regardless of trigger conditions | To acquire the input signal regardless of the trigger condition, press the Force key. The oscilloscope captures the signals once. | |
| In the Single trigger mode | Press the Single key to start waiting for the trigger condition. To break out of the Single mode, press the Run/Stop key. The trigger mode changes to the Normal mode. |
 |

Remote Control Interface

The Remote control interface section describes how to set up the USB interface for PC connection. The details of remote control commands are described in the GDS-1000 Programming Manual.

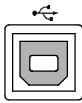



USB connection	PC side	Type A, host
	GDS-1000 side	Type B, slave
	Speed	1.1/2.0 (full speed)

- Procedure
1. Connect the USB cable to the USB slave port. 
 2. When the PC asks for the USB driver, select dso_cdc_1000.inf
 3. On the PC, activate a terminal application such as MTTY (Multi-Threaded TTY). To check the COM port No., see the Device Manager in the PC. For WindowsXP, select Control panel → System → Hardware tab.
 4. Run this query command via the terminal application.
*idn?
This command should return the manufacturer, model number, serial number, and firmware version in the following format.
GW, GDS-1022, 000000001, V1.00
 5. Configuring the command interface is completed. Refer to the programming manual for the remote commands and other details.

System Settings



The system settings show the oscilloscope's system information and allow changing the language.

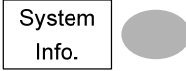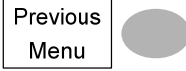Viewing the system information

- Procedure
1. Press the Utility key. 
 2. Press *More*. 
 3. Press *System Info*. The upper half of the display shows the following information.
 - Manufacturer
 - Model
 - Serial number
 - Firmware version
 4. Press any other key to go back to the waveform display mode. 

Selecting the language

- Parameter
- Language selection differs according to the region to which the oscilloscope is shipped.
- English
 - Chinese (traditional)
 - Chinese (simplified)
 - Others

- Procedure
1. Press the Utility key. 
 2. Press *Language* repeatedly to select the language. 

SAVE/RECALL

The save function allows saving display image, waveform data, and panel settings into the oscilloscope's internal memory or an external SD card. The recall function allows recalling the default factory settings, waveform data, and panel settings from the oscilloscope's internal memory or an external SD card.

File Structures

Three types of file are available: display image, waveform file, and panel settings.

Display image file format

Format	xxxx.bmp (Windows bitmap format)
Contents	The current display image in 234 x 320 pixels, color mode. The background color can be inverted (Ink saver function).


Waveform file format

Format	xxxx.csv (Comma-separated values format which can be opened in spreadsheet applications such as Microsoft Excel)	
Waveform type	CH1, 2	Input channel signal
	Math	Math operation result (page48)
Storage location	Internal memory	The oscilloscope's internal memory, which can hold 15 waveforms.

External SD card	An SD card can hold practically unlimited number of waveforms.
Ref A, B	The two reference waveforms are used as the buffer to recall a waveform in the display. You have to save a waveform into an internal memory or an SD card, then copy the waveform into the reference waveform slot (A or B), and then recall the reference waveform into the display.

Waveform data format

One division includes 25 points of horizontal and vertical data. The vertical point starts from the center line. The horizontal point starts from the leftmost waveform.

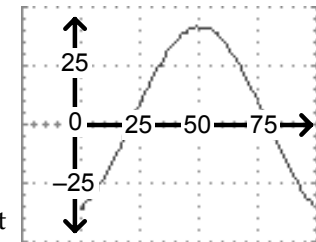

The time or amplitude represented by each data point depends on the vertical and horizontal scale. For example:

Vertical scale: 10mV/div (4mV per point)

Horizontal scale: 100us/div (4us per point)

Waveform file contents: other data








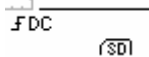
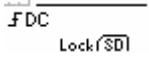
A waveform file also includes the following information.

- Memory length
- source channel
- vertical offset
- vertical scale
- coupling mode
- waveform last dot address
- date and time
- trigger level
- vertical position
- time base
- probe attenuation
- horizontal view
- horizontal scale
- sampling period
- sampling mode

Setup file format

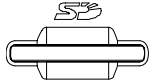
Format	xxxx.set (proprietary format) A setup file saves or recalls the following settings.	
Contents	Acquire	• mode
	Cursor	• source channel • cursor on/off • cursor location
	Display	• dots/vectors • accumulation on/off • grid type
	Measure	• item
	Utility	• hardcopy type • ink saver on/off • language
	Horizontal	• display mode • scale • position
	Trigger	• trigger type • source channel • trigger mode • video standard • video polarity • video line • pulse timing • slope/coupling
	Channel (vertical)	• vertical scale • vertical position • coupling mode • invert on/off • bandwidth limit on/off (GDS-1102, GDS-1062) • probe attenuation
	Math	• operation type • source channel • vertical position • unit/div • FFT window

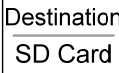Using the SD card file utilities


Background	For the SD card inserted into the oscilloscope, file deletion, folder creation, file/folder rename are available from the front panel.	
Procedure	1. Insert an SD card to the card slot.	
	2. Press the Save/Recall key. Select any save or recall functionality, for example SD card destination in Save image function.	<p>Save/Recall </p> <p>(Example)</p> <p>Save Image </p> <p>Destination SD Card </p>
	3. Press <i>File Utility</i> . The display shows the SD card contents.	File Utility 
	4. Use the Variable knob to move the cursor. Press <i>Select</i> to go into the folder or go back to the previous directory level.	<p>VARIABLE </p> <p>Select </p>
SD card indicator	When an SD card is inserted into the oscilloscope, an indicator appears at the right bottom corner of the display. (Unlock the SD card before file operations).	
	<p>SD card</p> 	<p>SD card (locked)</p> 

Creating a new folder / renaming a file or folder


1. Move the cursor to the file or folder location and press *New Folder* or *Rename*. The file/folder name and the character map will appear on the display.

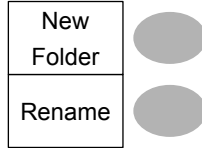

2. Use the Variable knob to move the pointer to the characters. Press *Enter* Character to add a character or *Back Space* to delete a character.

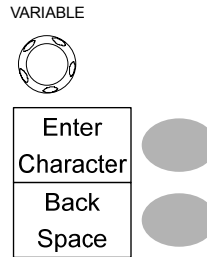

3. When editing is completed, press *Save*. The file/folder creation or rename will be completed.



Deleting a folder or file

1. Move the cursor to the folder or file location and press *Delete*. The message "Press F4 again to confirm this process" appears at the bottom of the display.



2. If the file/folder still needs to be deleted, press *Delete* again to complete the deletion. To cancel the deletion, press any other key.



Quick Save (HardCopy)

Background

The Hardcopy key works as a shortcut for saving display image, waveform data, and panel settings into an SD card.



Hardcopy key can be configured into two types of operation: save image and save all (image, waveform, setup).

Using the Save/Recall key can also save files with more option. For details, see page82.




Functionalities

- | | |
|--------------------|--|
| Save image (*.bmp) | Saves the current display image into an SD card. |
| Save all | Saves the following items into an SD card. <ul style="list-style-type: none"> • Current display image (*.bmp) • Current system settings (*.set) • Current waveform data (*.csv) • Last stored system settings (*.set) • Last stored waveform data (*.csv) |

Procedure


1. Insert an SD card to the slot.




2. Press the Utility key.




3. Press *Hardcopy Menu*.



4. Press *Function* repeatedly to select *Save Image* or *Save All*.



5. To invert the color in the display image, press *Ink Saver* and turn on or off the Ink Saver.



6. Press the Hardcopy key. The file or folder will be saved to the root directory of the SD card.




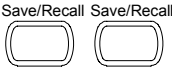

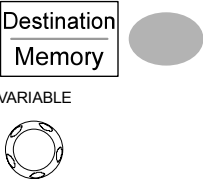
Save



This section describes how to save data using the Save/Recall menu.


File type/source/destination

Item	Source	Destination
Panel setup (xxxx.set)	<ul style="list-style-type: none"> Panel settings 	<ul style="list-style-type: none"> Internal memory: S1 ~ S15 External memory: SD card
Waveform data (xxxx.csv)	<ul style="list-style-type: none"> Channel 1, 2 Math operation result Reference waveform A, B 	<ul style="list-style-type: none"> Internal memory: W1 ~ W15 Reference waveform A, B External memory: SD card
Display image (xxxx.bmp)	<ul style="list-style-type: none"> Display image 	<ul style="list-style-type: none"> External memory: SD card
Save All	<ul style="list-style-type: none"> Display image (xxxx.bmp) Waveform data (xxxx.csv) Panel settings (xxxx.set) 	<ul style="list-style-type: none"> External memory: SD card




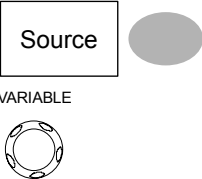
Saving the panel settings


- Procedure
- (For saving to an external SD card) Insert the card into the slot. 
 - Press the Save/Recall key twice to recall the Save menu. 
 - Press *Save Setup*. 
 - Press *Destination* repeatedly to select the saved location. Use the Variable knob to change the internal memory location (S1 ~ S15). 

Memory	Internal memory, S1 ~ S15
SD card	External card, no practical limitation for the amount of file. When saved, the setup file will be placed in the root directory.
 - Press *Save* to confirm saving. When completed, a message appears at the bottom of the display. 
- Note  The file will not be saved if the power is turned off or SD card is disconnected before completion.

- File utilities
- To edit SD card contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page78. 


Saving the waveform

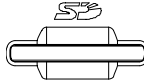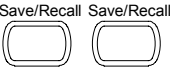
- Procedure
- (For saving to an external SD card) Insert the card into the slot. 
 - Press the Save/Recall key twice to recall the Save menu. 
 - Press *Save Waveform*. 
 - Press *Source*. Use the Variable knob to select the source signal. 

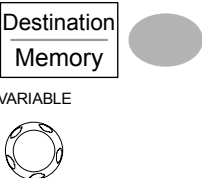CH1 ~ CH2	Channel 1 ~ 2 signal
Math	Math operation result (page48)
RefA, B	Internally stored reference waveforms A, B
 - Press *Destination* repeatedly to select the file destination. Use the Variable knob to select the memory location. 


Memory	Internal memory, W1 ~ W15
SD card	External card, no practical limitation for the amount of file. When saved, the waveform will be placed in the root directory.

Ref Internal reference waveform, A/B


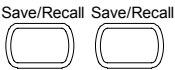



6. Press *Save* to confirm saving. When completed, a message appears at the bottom of the display.
- 

Note  The file will not be saved if the power is turned off or the SD card is disconnected before completion.


File utilities To edit SD card contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page78.




Saving the display image

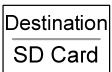
- Procedure
- (For saving to an external SD card) Insert the card into the slot. 
 - Press the Save/Recall key twice to recall the Save menu. 
 - Press *Save Image*. 
 - Press *Ink Saver* repeatedly to invert the background color (on) or not (off). 
 - Press *Destination*. 

SD card External card, no practical limitation on the amount of file. When saved, the image file will be placed in the root directory.




6. Press *Save* to confirm saving. When completed, a message appears at the bottom of the display.
- 

Note  The file will not be saved if the power is turned off or SD card is disconnected before completion.

File utilities To edit SD card contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page78.

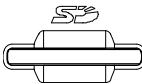


Saving all (panel settings, display image, waveform)


- Procedure
- (For saving to an external SD card) Insert the card into the slot. 
 - Press the Save/Recall key twice to recall the Save menu. 
 - Press *Save All*. The following information will be saved. 
- Setup file (Axxxx.set) Two types of setups are saved: the current panel setting and the last internally saved settings (one of S1 ~ S15).
- Display image (Axxxx.bmp) The current display image in the bitmap format.

Waveform data (Axxxx.csv) Two types of waveform data are saved: the currently active channel data and the last internally saved data (one of W1 ~ W15).

4. Press *Ink Saver* repeatedly to invert the background color (on) or not (off) for the display image.




5. Press *Destination*.



SD card External card, no practical limitation for the amount of file. When saved, the folder will be placed in the root directory.

6. Press *Save* to confirm saving. When completed, a message appears at the bottom of the display.



Note  The file will not be saved if the power is turned off or SD card is disconnected before completion.

7. Together with the current setup/waveform/image, the last saved waveform file (one from W1 ~ W15) and setup file (one from S1 ~ S15) are also included in the folder.

File utilities

To edit SD card contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page78.





Recall

File type/source/destination



Item	Source	Destination
Default panel setup	<ul style="list-style-type: none"> Factory installed setting 	<ul style="list-style-type: none"> Current front panel
Reference waveform	<ul style="list-style-type: none"> Internal memory: A, B 	<ul style="list-style-type: none"> Current front panel
Panel setup (DSxxxx.set)	<ul style="list-style-type: none"> Internal memory: S1 ~ S15 External memory: SD card 	<ul style="list-style-type: none"> Current front panel
Waveform data (DSxxxx.csv)	<ul style="list-style-type: none"> Internal memory: W1 ~ W15 External memory: SD card 	<ul style="list-style-type: none"> Reference waveform A, B

Recalling the default panel settings

- Procedure
1. Press the Save/Recall key. 
 2. Press *Default Setup*. The factory installed setting will be recalled. 

Setting contents The following is the default panel setting contents.

Acquisition	Mode: Normal	
Channel	Coupling: DC	Invert: Off
	BW limit: Off	Probe attenuation: x1
	(GDS-1102, GDS-1062)	
Cursor	Source: CH1	Horizontal: None

	Vertical: None	
Display	Type: Vectors	Accumulate: Off
	Graticule: 	
Horizontal	Scale: 2.5us/Div	Mode: Main Timebase
Math	Type: + (Add)	Channel: CH1+CH2
	Position: 0.00 Div	Unit/Div: 2V
Measure	Item: Vpp, Vavg, Frequency, Duty cycle, Rise Time	
Trigger	Type: Edge	Source: Channel1
	Mode: Auto	Slope: 
	Coupling: DC	Rejection: Off
	Noise Rejection: Off	
Utility	SaveImage, InkSaver Off	

Recalling a reference waveform to the display


Procedure

1. The reference waveform must be stored in advance. See page84 for details.


2. Press the Save/Recall key.




3. Press *Display Refs.* The reference waveform display menu appears.



4. Select the reference waveform, *Ref A* or *Ref B*, and press it. The waveform appears on the display and the period and amplitude of the waveform appears in the menu.









5. To clear the waveform from the display, press *RefA/B* again.




Recalling panel settings


Procedure

- (For recalling from an external SD card) Insert the card into the slot. 
- Press the Save/Recall key. 
- Press *Recall Setup*. 
- Press *Source* repeatedly to select the file source, internal or external memory. Use the Variable knob to change the memory.  

Memory	Internal memory, S1 ~ S15
SD card	External card, no practical limitation on the amount of file. The setup file must be placed in the root directory to be recognized.
- Press *Recall* to confirm recalling. When completed, a message appears at the bottom of the display. 






Note  The file will not be saved if the power is turned Off or SD card is disconnected before completion.


File utilities


To edit SD card contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page78. 

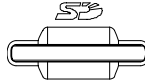Recalling a waveform


Procedure


- (For recalling from an external SD card) Insert the card into the slot. 
- Press the Save/Recall key. 
- Press *Recall Waveform*. The display shows the available source and destination options. 
- Press *Source* repeatedly to select the file source, internal memory or external SD card. Use the Variable knob to change the memory location (W1 ~ W15).  

Memory	Internal memory, W1 ~ W15
SD card	External flash drive, no practical limitation on the amount of file. The waveform file must be placed in the root directory to be recognized.
- Press *Destination*. Use the Variable knob to select the memory location. 

RefA, B Internally stored reference waveforms A, B 

6. Press *Recall* to confirm recalling. When completed, a message appears at the bottom of the display.



Note  The file will not be saved if the power is turned off or SD card is disconnected before completion.

File utilities

To edit SD card contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page78.



MAINTENANCE

Two types of maintenance operations are available: calibrating the vertical resolution, and compensating the probe. Run these operations when using the oscilloscope in a new environment.


Vertical Resolution Calibration

Procedure


1. Press the Utility key.



2. Press *More*.




3. Press *Self Cal Menu*.



4. Press *Vertical*. The message “Set CAL to CH1, then press F5” appears at the bottom of the display.




5. Connect the calibration signal between the rear panel CAL out terminal and the Channel1 input.




6. Press F5. The calibration automatically starts.

- The Channel1 calibration will complete in less than 5 minutes.



- When finished, connect the calibration signal to the Channel 2 input and repeat the procedure.




- The calibration is completed and the display goes back to the previous state.

Probe Compensation

Procedure


- Connect the probe between Channel1 input and the probe compensation output (2Vp-p, 1kHz square wave) on the front panel. Set the probe attenuation to x10.

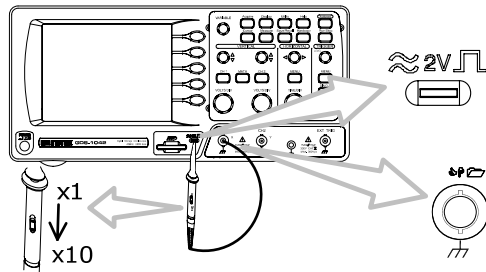


- Press the Utility key.



- Press *ProbeComp*.





- Press *Wavetype* repeatedly to select the standard square wave.





- Press the Autoset key. The compensation signal will appear in the display.



- Press the Display key, then *Type* to select the vector waveform.

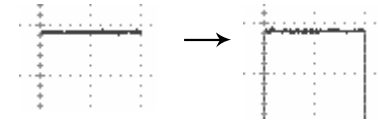

- Turn the adjustment point on the probe until the signal edge becomes sharp.

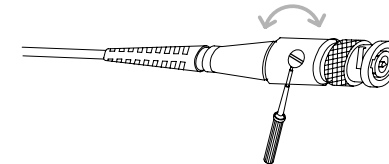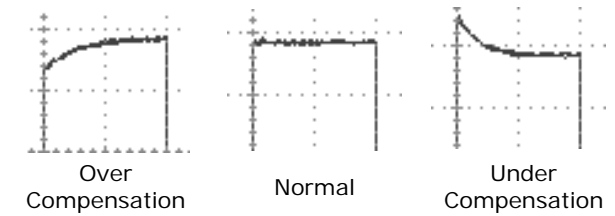

FAQ

- The input signal does not appear in the display.
- I want to remove some contents from the display.
- The waveform does not update (frozen).
- The probe waveform is distorted.
- Autoset does not catch the signal well.
- I want to clean up the cluttered panel settings.
- The accuracy does not match the specifications.
- The SD card slot does not accept my card.

The input signal does not appear in the display.

Make sure you have activated the channel. If not, press the CH key. If the signal still does not appear, press the Autoset key.

I want to remove some contents from the display.

To clear the math result, press the Math key twice (page48).

To clear the cursor, press the Cursor key again (page46).

To clear the Help contents, press the Help key again (page35).

The waveform does not update (frozen).

Press the Run/Stop key to unfreeze the waveform. See page38 for details. For trigger setting details, see page65.

The probe waveform is distorted.

You might need to compensate the probe. For details, see page95. Note that the frequency accuracy and duty factor are not specified for probe compensation waveform and therefore it should not be used for other reference purpose.

Autoset does not catch the signal well.

Autoset function cannot catch signals under 30mV or 30Hz. Please use the manual operation. See page37 for details.

I want to clean up the cluttered panel settings.

Recall the default settings by pressing the Save/Recall key→Default Setting. For default setting contents, see page34.

The saved display image is too dark on the background.

Use the Inksaver function which reverses the background color. For details, see page85.

The accuracy does not match the specifications.

Make sure the device is powered on for at least 30 minutes, within +20°C~+30°C. This is necessary to stabilize the unit to match the specification.

The SD card slot does not accept my card.


Make sure it is a standard SD card. MMC and SDHC are not supported.

For more information, contact your local dealer .


APPENDIX

Fuse Replacement

- Procedure
1. Take off the power cord and remove the fuse socket using a minus driver.

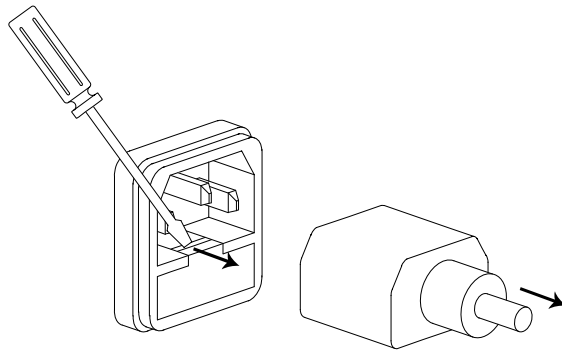

2. Replace the fuse in the holder.

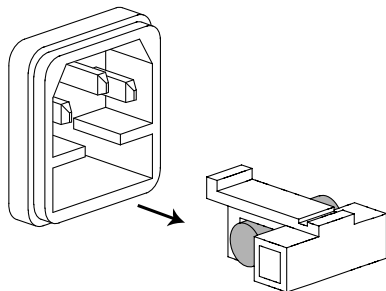

Ratings T1A, 250V

GDS-1000 Series Specifications

The specifications apply when the oscilloscope is powered on for at least 30 minutes under +20°C~+30°C.

Model-specific specifications

5322DC	Bandwidth (-3dB)	DC coupling: DC ~ 25MHz AC coupling: 10Hz ~ 25MHz
	Bandwidth Limit	None
	Trigger Sensitivity	Approx. 0.5div or 5mV
	External Trigger Sensitivity	~ 50mV
	Rise Time	< 14ns approx.
5342DC	Bandwidth (-3dB)	DC coupling: DC ~ 40MHz AC coupling: 10Hz ~ 40MHz
	Bandwidth Limit	None
	Trigger Sensitivity	0.5div or 5mV (DC ~ 25MHz)
	External Trigger Sensitivity	1.5div or 15mV (25MHz-40MHz)
	Rise Time	~ 50mV
	Rise Time	< 8.75ns approx.
5362DC	Bandwidth (-3dB)	DC coupling: DC ~ 60MHz AC coupling: 10Hz ~ 60MHz
	Bandwidth Limit	20MHz (-3dB)
	Trigger Sensitivity	0.5div or 5mV (DC ~ 25MHz)
	External Trigger Sensitivity	1.5div or 15mV (25MHz-60MHz)
	Rise Time	~ 50mV (DC-25MHz)
	Rise Time	~ 100mV (25MHz-60MHz)
	Rise Time	< 5.8ns approx.
5382DC	Bandwidth (-3dB)	DC coupling: DC ~ 100MHz AC coupling: 10Hz ~ 100MHz
	Bandwidth Limit	20MHz (-3dB)
	Trigger Sensitivity	0.5div or 5mV (DC ~ 25MHz)
	External Trigger Sensitivity	1.5div or 15mV (25MHz-100MHz)
	Rise Time	~ 50mV (DC-25MHz)
	Rise Time	~ 100mV (25MHz-100MHz)
	Rise Time	< 3.5ns approx.

Common specifications

Vertical	Sensitivity	2mV/div~5V/Div (1-2-5 increments)
	Accuracy	± (3% x Readout +0.1div + 1mV)
	Bandwidth	See model-specific specifications
	Rise Time	See model-specific specifications
	Input Coupling	AC, DC, Ground
	Input Impedance	1MΩ±2%, ~15pF
	Polarity	Normal, Invert
	Maximum Input	300V (DC+AC peak), CAT II
	Math Operation	+, -, FFT
	Offset Range	2mV/div~50mV/div: ±0.4V 10mV/div~500mV/div: ±4V 1V/div~5V/div: ±40V
Trigger	Sources	CH1, CH2, Line, EXT
	Modes	Auto, Normal, Single, TV, Edge, Pulse
	Coupling	AC, DC, LF rej, HF rej, Noise rej
	Sensitivity	See model-specific specifications
External trigger	Range	DC: ±15V, AC: ±2V
	Sensitivity	See model-specific specifications
	Input Impedance	1MΩ±2%, ~16pF
	Maximum Input	300V (DC+AC peak), CATII
Horizontal	Range	1ns/div~10s/div, 1-2-5 increment Roll: 250ms/div - 10s/div
	Modes	Main, Window, Window Zoom, Roll, X-Y
	Accuracy	±0.01%
	Pre-Trigger	10 div maximum
	Post-Trigger	1000 div
	X-Y Mode	X-Axis Input Channel 1 Y-Axis Input Channel 2 Phase Shift ±3° at 100kHz
Signal Acquisition	Real-Time	250M Sa/s maximum
	Equivalent	25G Sa/s maximum
	Vertical Resolution	8 bits
	Record Length	4k points maximum
	Acquisition	Normal, Peak Detect, Average
	Peak Detection	10ns (500ns/div ~ 10s/div)
	Average	2, 4, 8, 16, 32, 64, 128, 256

Cursors and Measurement	Voltage	Vpp, Vamp, Vavg, Vrms, Vhi, Vlo, Vmax, Vmin, Rise Preshoot/ Overshoot, Fall Preshoot/ Overshoot
	Time	Freq, Period, Rise Time, Fall Time, + Width, - Width, Duty Cycle
	Cursors	Voltage difference (ΔV) and Time difference (ΔT) between cursors
	Auto Counter	Resolution: 6 digits, Accuracy: ±2% Signal source: All available trigger source except the Video trigger
Control Panel Function	Autoset	Automatically adjust Vertical Volt/div, Horizontal Time/div, and Trigger level
	Save/Recall	Up to 15 sets of measurement conditions and waveforms
Display	LCD	5.6 inch, TFT, brightness adjustable
	Resolution (dots)	234 (Vertical) x 320 (Horizontal)
	Graticule	8 x 10 divisions
Interface	Display Contrast	Adjustable
	USB Slave Connector	USB1.1 & 2.0 full speed compatible (printers and flash disk not supported)
	SD Card Slot	Image (BMP) and waveform data (CSV)
Probe Compensation Signal	Frequency range	1kHz ~ 100kHz adjustable, 1kHz step
	Duty cycle	5% ~ 95% adjustable, 5% step
	Amplitude	2Vpp ± 3%
Power Source	Line Voltage	100V~240V AC, 47Hz~63Hz
	Power Consumption	18W, 40VA maximum
	Fuse Rating	1A slow, 250V
	Operation Environment	Ambient temperature 0 ~ 50°C Relative humidity ≤ 80% @35°C
Storage Environment	Ambient temperature -20 ~ 70°C Relative humidity ≤ 80% @70°C	
Dimensions	341.5(W) x 162.3 (H) x 159 (D) mm	
Weight	Approx. 2.5kg	

Probe Specifications

Probe for 5322DC, 5342DC

Applicable model & probe	5322DC, 5342DC GTP-060A-4	
Position x 10	Attenuation Ratio	10:1
	Bandwidth	DC ~ 60MHz
	Input Resistance	10M Ω when used with 1M Ω input
	Input Capacitance	30pF approx.
	Maximum Input Voltage	DC 300V Derating with frequency
Position x 1	Attenuation Ratio	1:1
	Bandwidth	DC ~ 6MHz
	Input Resistance	1M Ω when used with 1M Ω input
	Input Capacitance	200pF approx.
	Maximum Input Voltage	DC 150V Derating with frequency
Operating Cond.	Temperature	-10°C ~ 55°C
	Relative Humidity	≤85% @35°C
Safety Standard	IEC 1010-1 CAT II	

Probe for 5362DC, 5382DC

Applicable model & probe	5362DC GTP-060A-2	5382DC GTP-100A-2
Position x 10	Attenuation Ratio	10:1
	Bandwidth	DC ~ 60MHz DC ~ 100MHz
	Input Resistance	10M Ω when used with 1M Ω input
	Input Capacitance	23pF approx. 17pF approx.
	Maximum Input Voltage	500V CAT I, 300V CAT II (DC+Peak AC) Derating with frequency
Position x 1	Attenuation Ratio	1:1
	Bandwidth	DC ~ 6MHz
	Input Resistance	1M Ω when used with 1M Ω input

Input Capacitance	180pF approx.	47pF approx.
Maximum Input Voltage	300V CAT I, 150V CAT II (DC+Peak AC) Derating with frequency	
Operating Cond.	Temperature	-10°C ~ 55°C
	Relative Humidity	≤85% @35°C
Safety Standard	IEC 1010-1 CAT II	

INDEX

AC coupling	60	cycle time measure	43
accumulating waveform	53	DC coupling	59
acquisition	50	declaration of conformity	101
menu tree	19	default setup	85
specification	98	contents	33
addition	48	menu tree	25
menu tree	23	display	54
amplitude measure	42	contrast setting	54
auto set	36	diagram	16
exception	37	grid setting	54
faq	95	menu tree	21
specification	99	shortcut	21
auto trigger	62	specification	99
automatic measurement	44	display image	
menu tree	24	faq	95
overview	42	file format	72
shortcut	24	save	82
specification	99	save menu tree	28
average acquisition	51	dot waveform	53
average voltage measure	43	duty cycle measure	43
bandwidth limitation	60	edge trigger	65
blackman window	47	menu tree	30
calibration, vertical resolution	91	EN61010	101
caution symbol	7	measurement category	8
channel	35	pollution degree	9
faq	94	environment	99
menu tree	20	safety instruction	9
shortcut	20	equivalent time sampling	52
cleaning the instrument	9	external trigger	62
configure remote control	70	input terminal	14
coupling mode	59	falling time measure	43
menu tree	20	FFT	49
cursor	45	menu tree	23
faq	94	overview	47
menu tree	20	file format	72
shortcut	20	firmware version	71
specification	99	flattop window	47
		force trigger	69

frequency measure	43
frequency rejection	64
front panel diagram.....	12
fuse replacement.....	96
safety instruction	9
general purpose signal.....	40
ground	
coupling	59
symbol.....	7
terminal.....	14
hanning window.....	47
hardcopy	77
menu tree	32
shortcut	32
help	34
faq.....	94
high voltage measure	42
horizontal.....	55
basic operation.....	38
cursor operation.....	45
menu tree	22
position.....	55
scale.....	55
shortcut	22
specification.....	98
IEC 1010-1.....	100
ink saver	
in display save	82
in hardcopy.....	78
in save all	84
input frequency indicator	16
invert waveform	60
language selection	71
list of features	11
low voltage measure	43
math	
faq.....	94
menu tree	23
shortcut	23
model difference	11
negative peak measure.....	42
noise rejection.....	64
normal acquisition.....	50
normal trigger	63
NTSC	63
overshoot voltage measure.....	43
PAL	63
peak detect acquisition.....	51
peak to peak measure.....	42
peak voltage measure.....	42
power on/off	
safety instruction.....	8
switch overview.....	15
preshoot voltage measure.....	43
probe.....	92
attenuation level	61
attenuation menu tree.....	20
compensation menu tree.....	32
compensation signal overview...	40
faq.....	95
peak detect demonstration.....	51
pulse time measure.....	43
pulse width trigger	67
condition	63
menu tree	30
real time sampling	52
rear panel diagram.....	15
recall.....	85
default setup.....	85
menu tree	25
reference waveform	87
setup	88
shortcut	25
waveform.....	89
rectangular window	47
reference waveform	
menu tree	26
recall	87
remote control interface	70
rising time measure	43
roll mode	56
root mean square measure.....	43
run/stop	37
faq.....	94
save	79
display image.....	82
menu tree	25
setup	80
shortcut	25
specification.....	99
waveform.....	81
save all.....	83
menu tree	28

SD card		specification.....	98
faq.....	95	status indicator.....	16
file menu tree	29	video	66
file operation	75	UK power cord.....	10
SECAM	63	USB for remote control.....	70
serial number	71	utility	
service operation		key overview	13
about disassembly.....	8	menu tree	31
contact	95	shortcut	31
setting up the oscilloscope	17	vector waveform.....	53
setup		vertical.....	59
default contents.....	33	basic operation.....	39
file format.....	74	cursor operation.....	46
how to save.....	80	position.....	59
recall.....	88	resolution calibration.....	91
recall menu tree	25	scale.....	59
save menu tree	27	specification.....	98
single trigger	69	video line	63
single trigger mode	63	video trigger	66
specifications.....	97	menu tree	29
faq.....	95	warning symbol	7
subtraction.....	48	waveform	
menu tree	23	file format	72
system information	71	invert waveform	60
timebase indicator	55	recall	89
trigger.....	62	recall menu tree	26
coupling	64	roll mode.....	56
edge.....	65	save	81
force	69	savemenu tree.....	27
indicator	62	x-y mode	58
level knob.....	64	zoom mode	57
menu tree	29	waveform accumulation.....	53
parameter.....	62	x-y mode	58
pulse width.....	67	specification.....	98
shortcut	29	zoom waveform	57

SEFRAM Instruments et Systèmes

32, rue E. MARTEL

F 42100 – SAINT-ETIENNE

France

Tel : 0825 56 50 50

Fax : 04 77 57 23 23

E-mail : sales@sefram.fr

Web : www.sefram.fr